

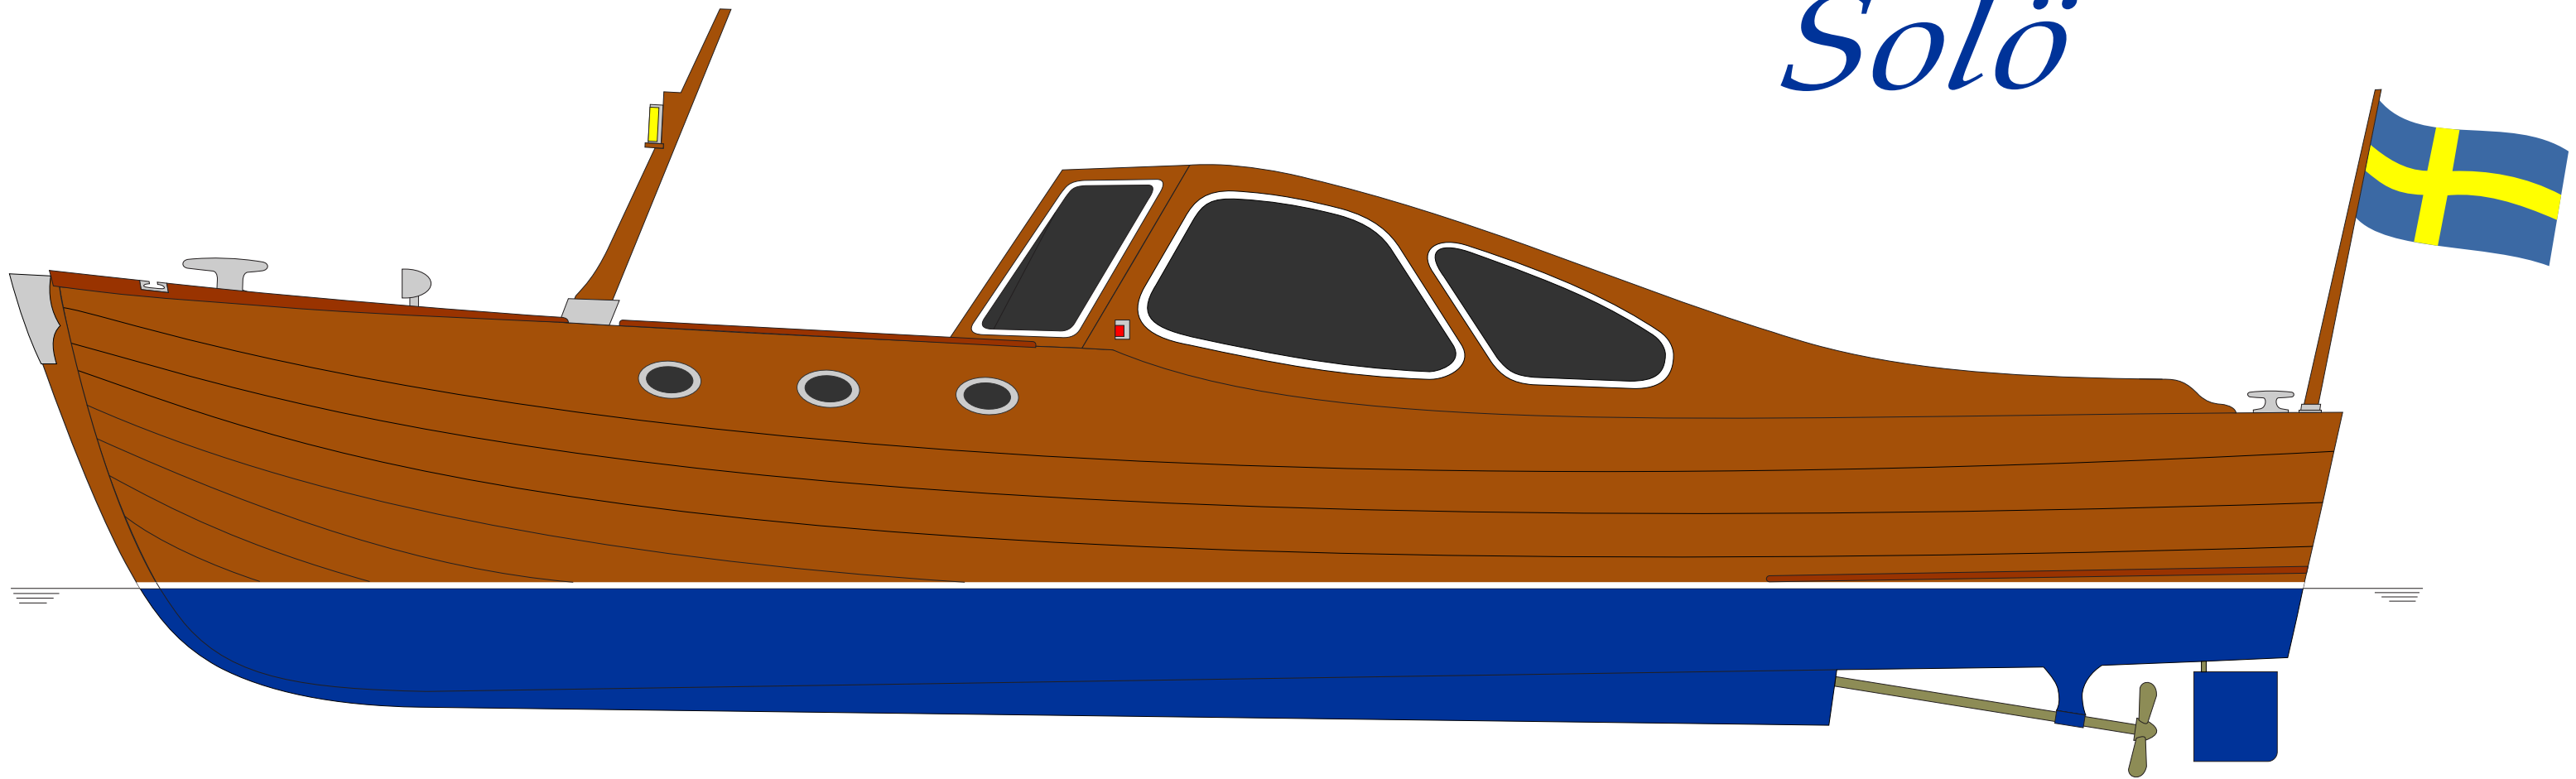
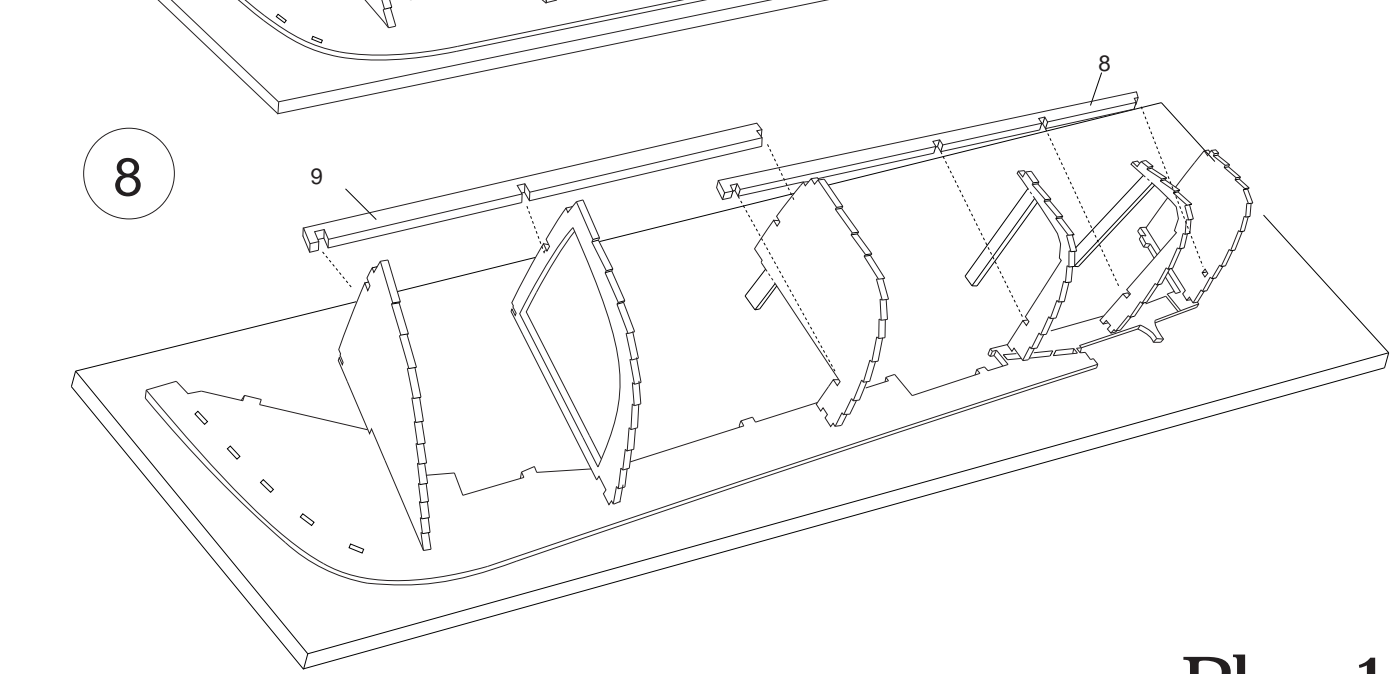
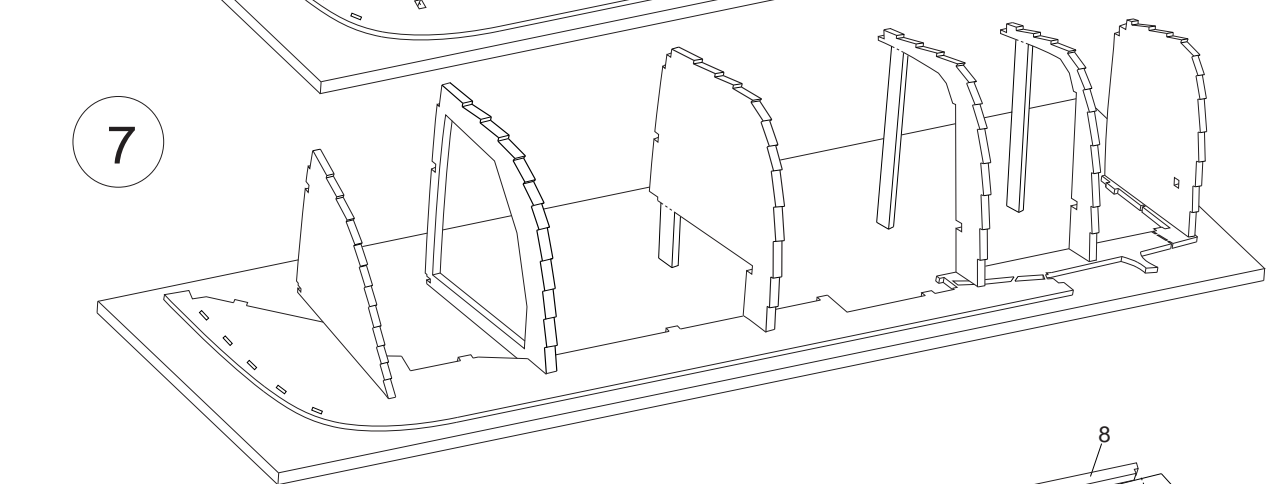
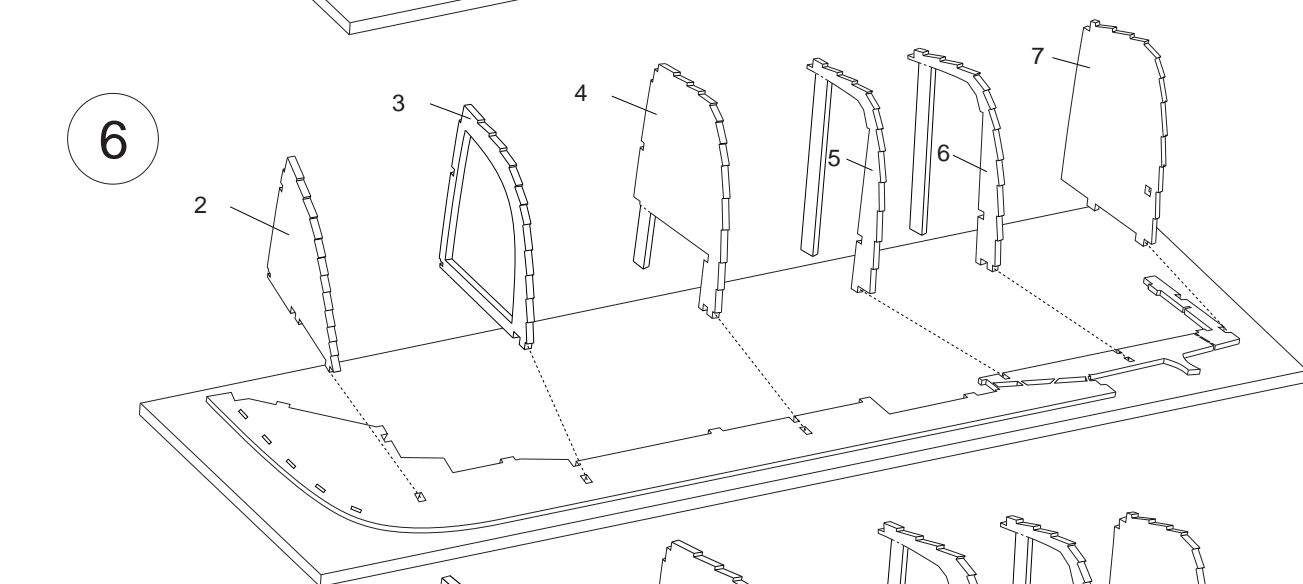
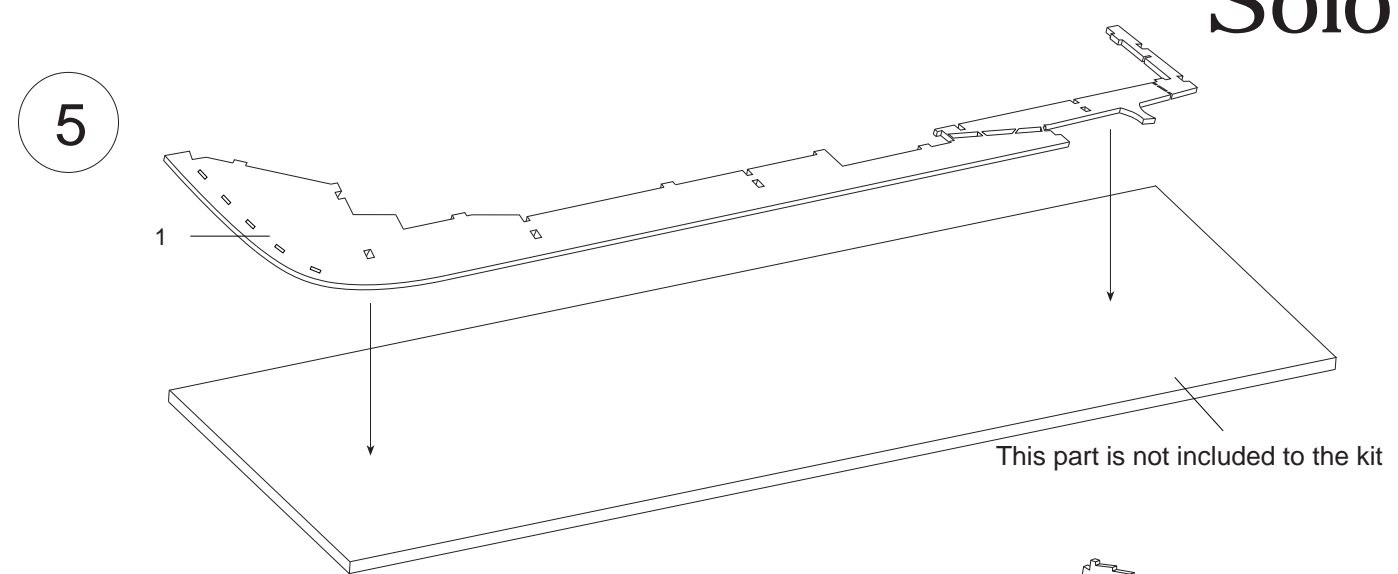
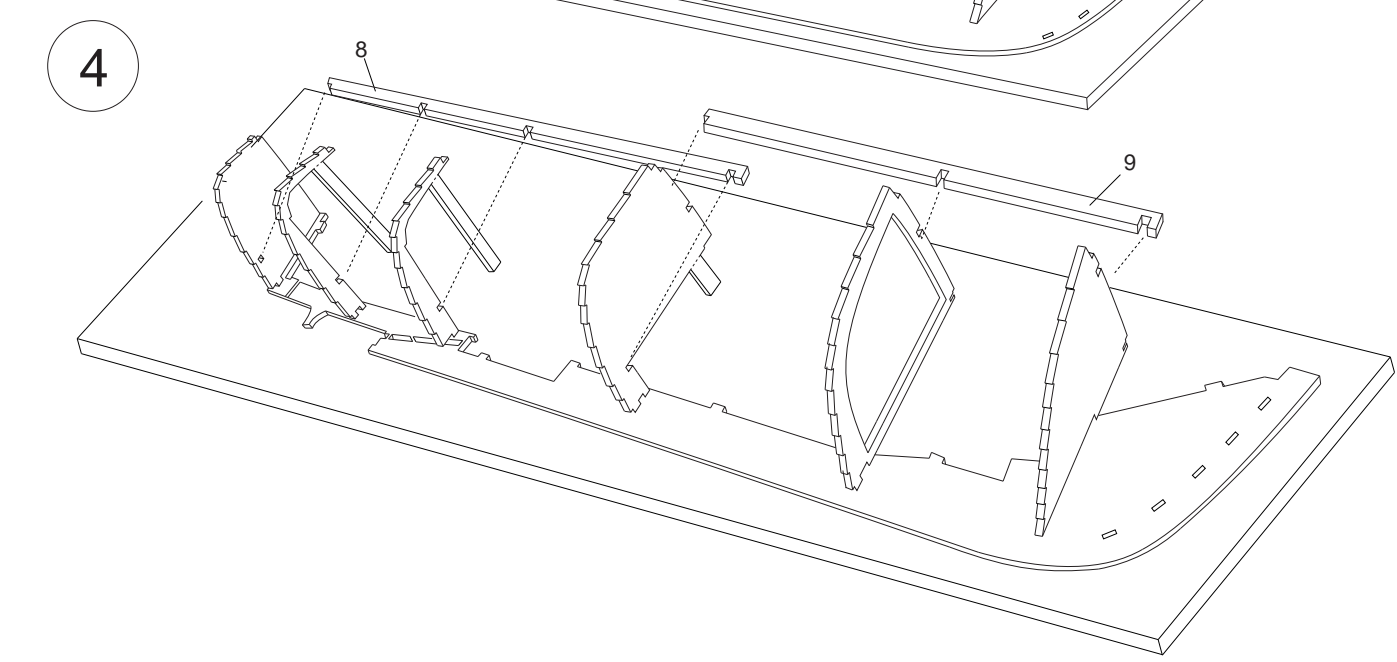
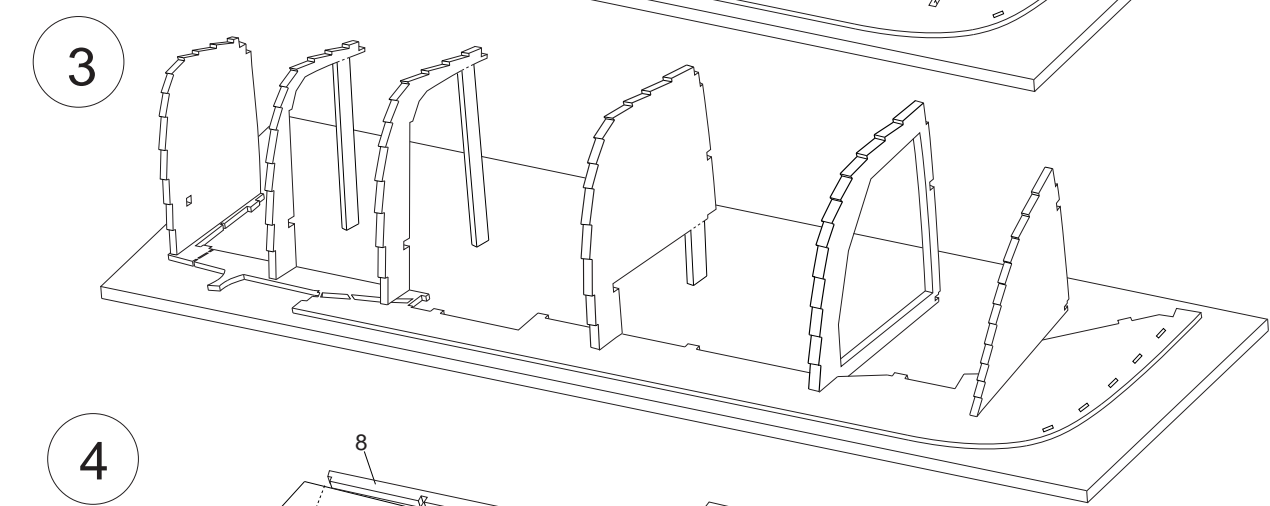



Solö

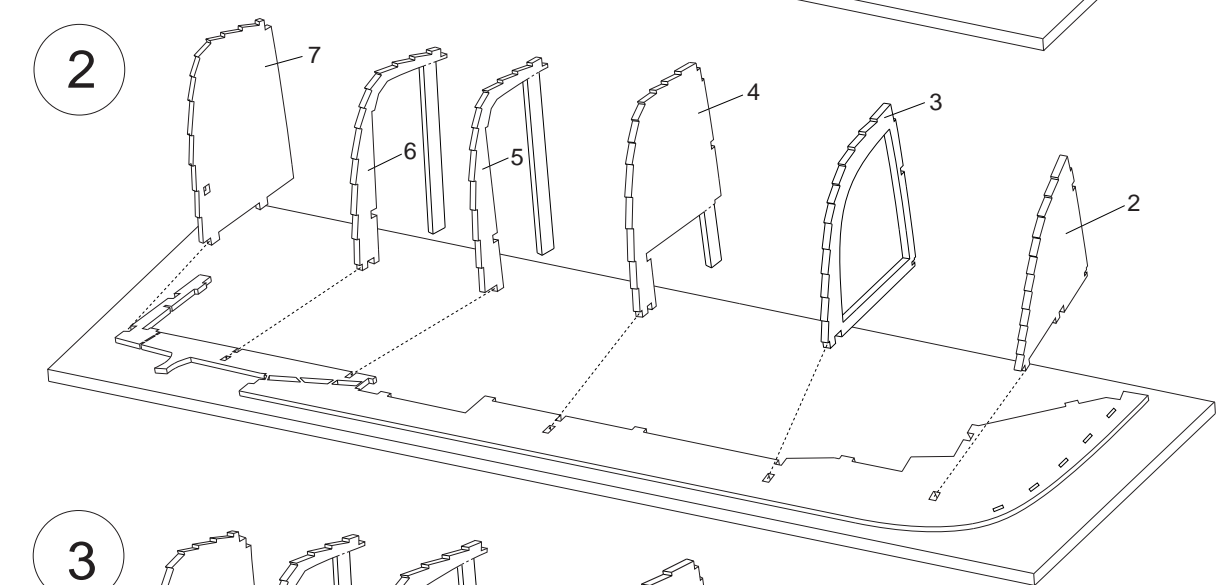


Scale : 1/10

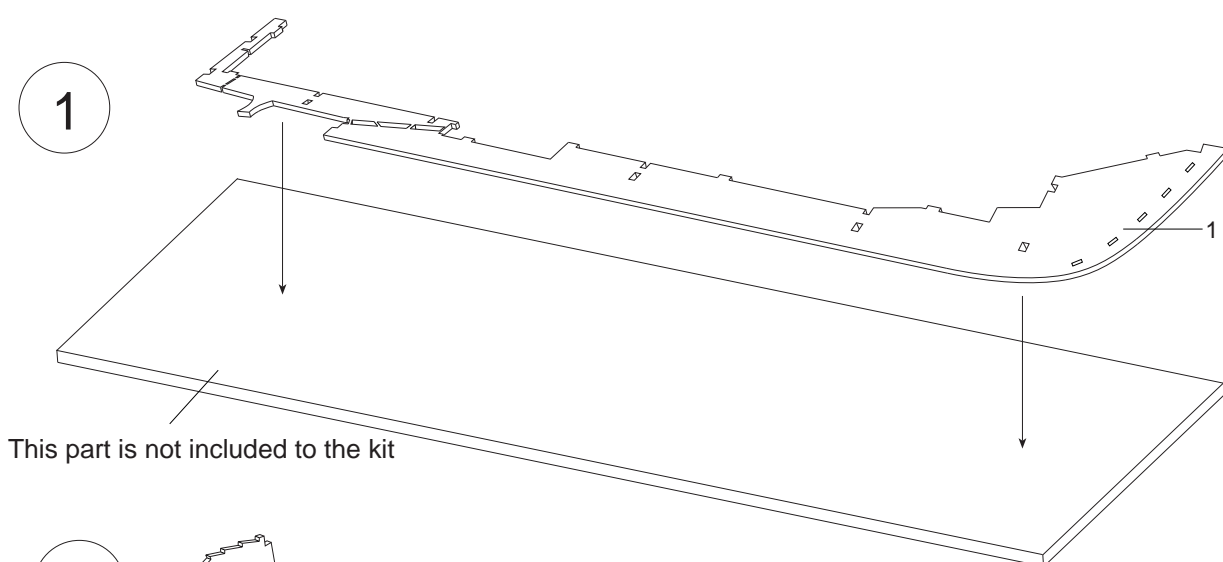


9

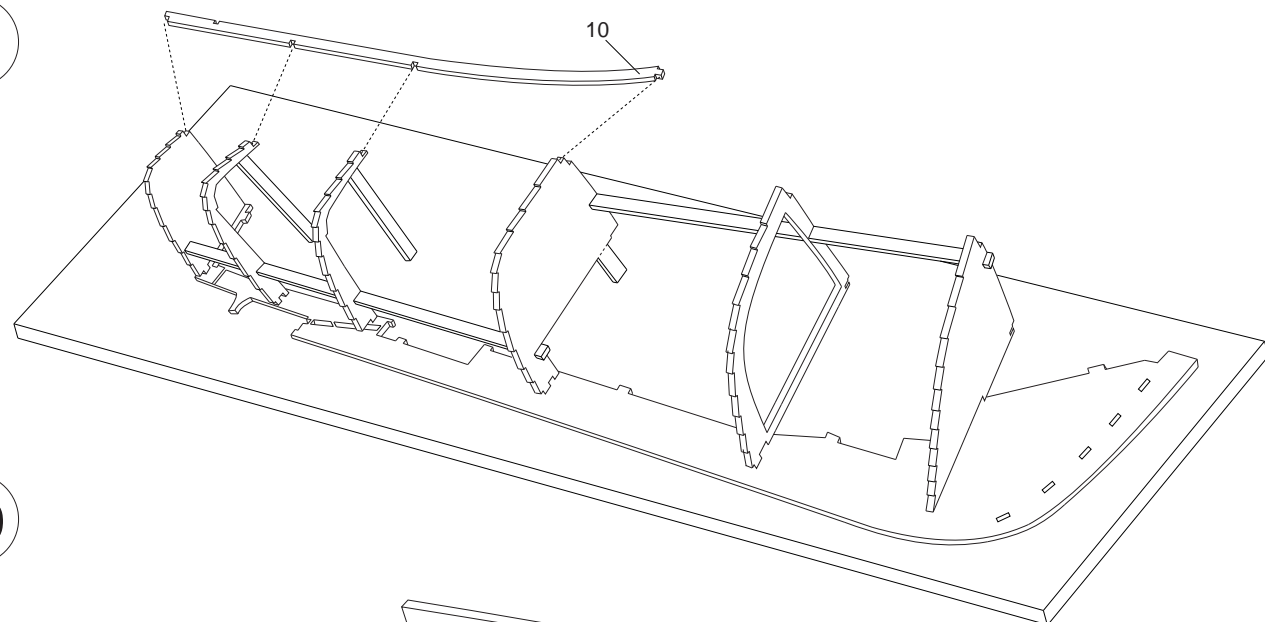


10

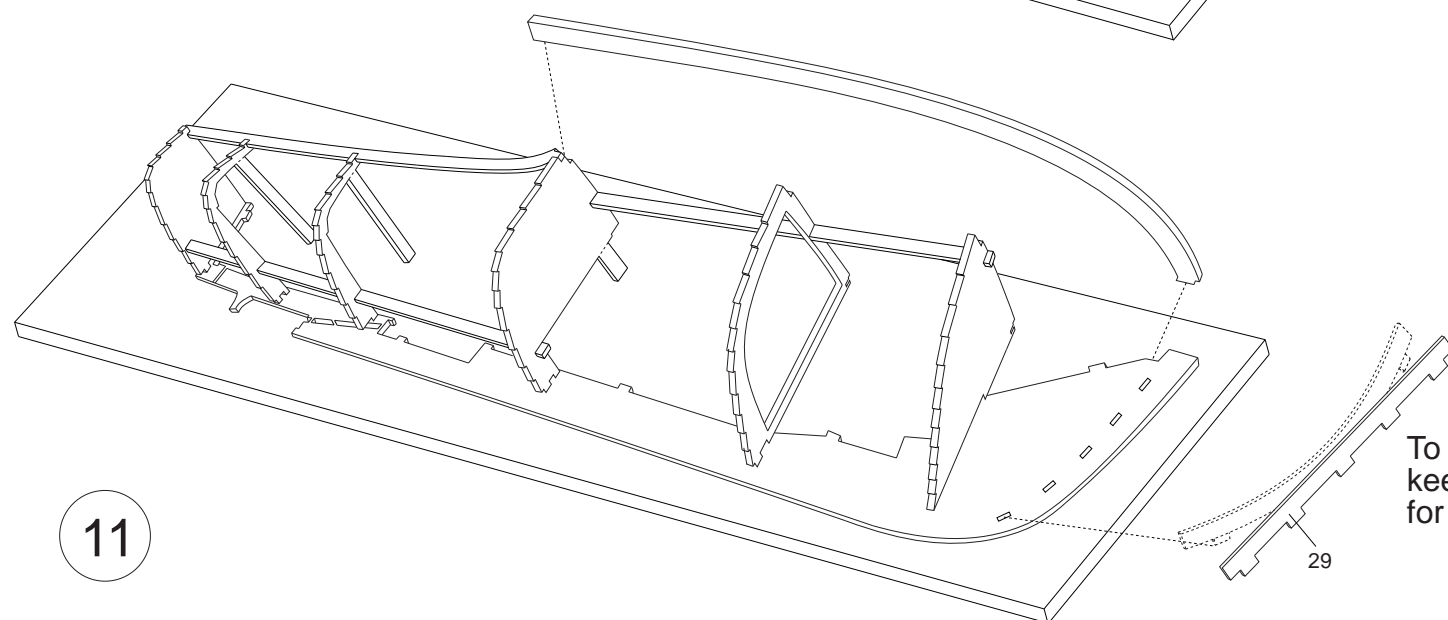


11

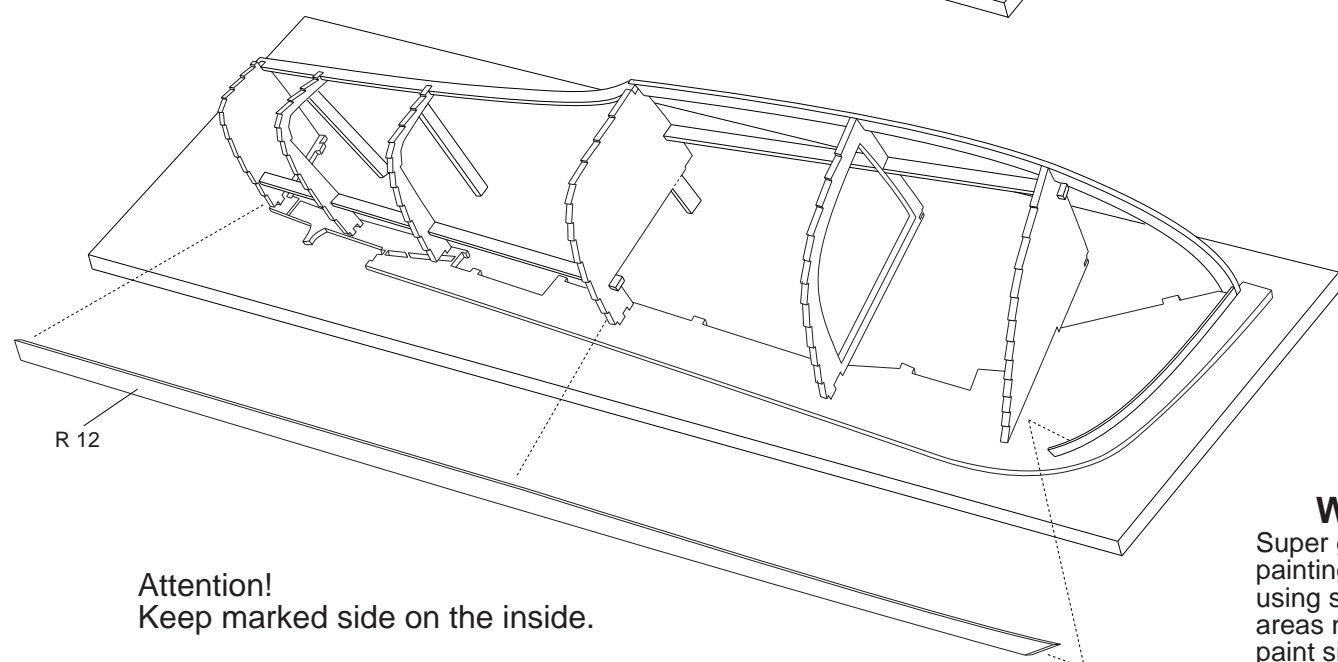


12

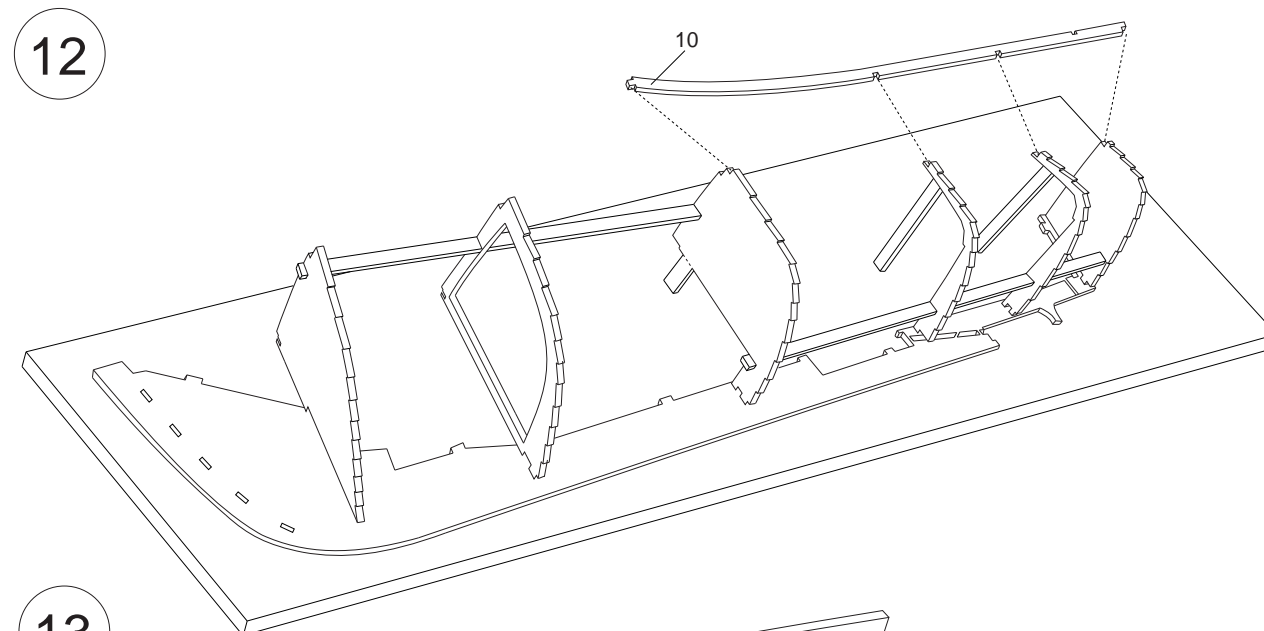

13

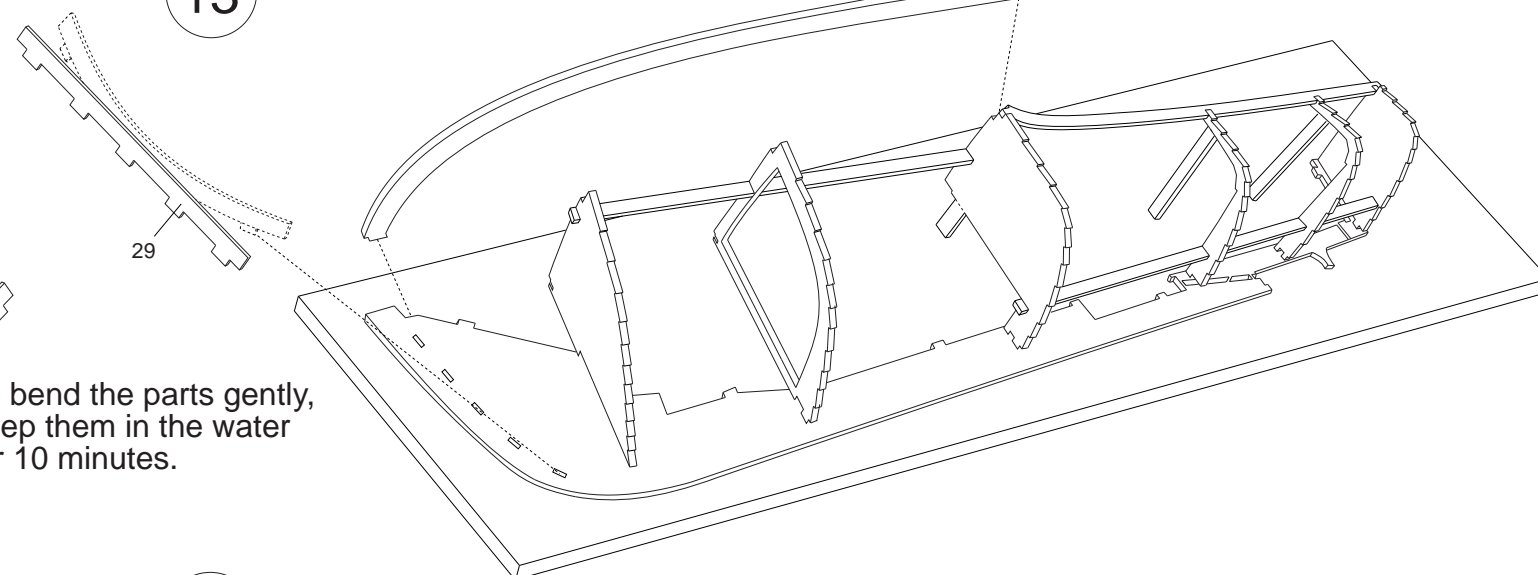

14

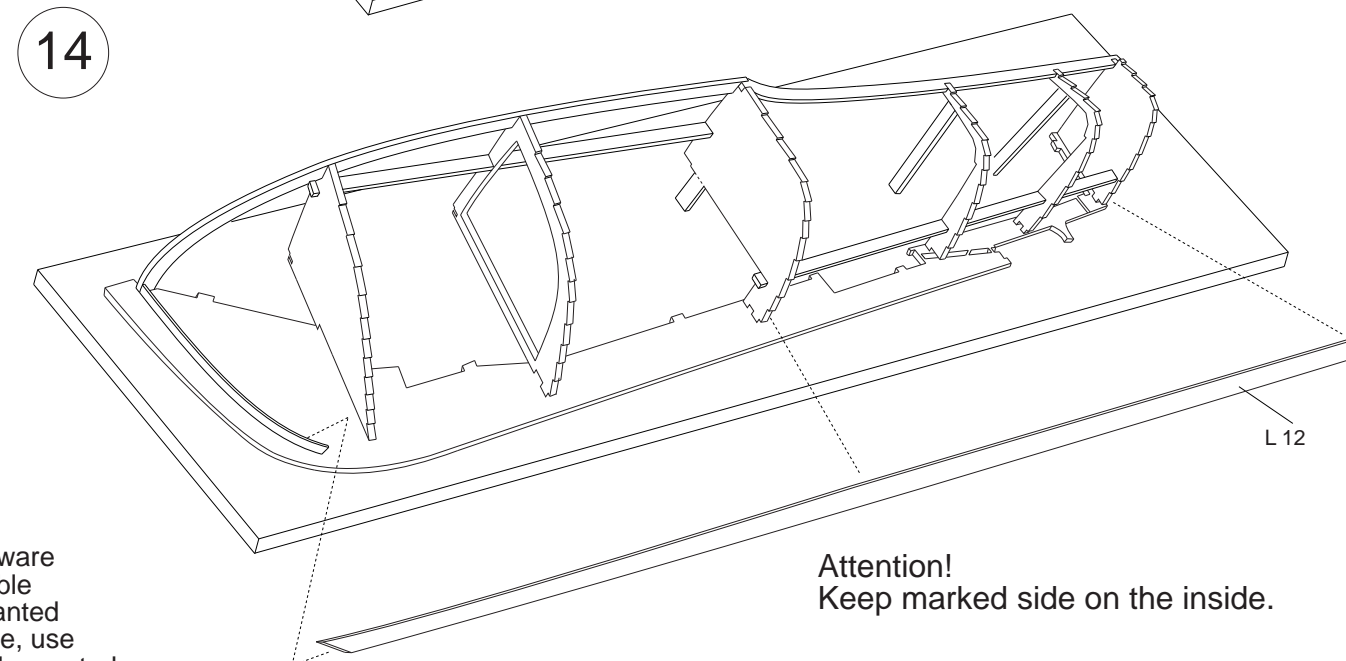

To bend the parts gently,
keep them in the water
for 10 minutes.

WARNING!

Super glue may cause
painting problems. Be aware
using super glue for visible
areas not to cause unwanted
paint situation. If possible, use
a glue that is applied under control.

Attention!
Keep marked side on the inside.


Attention!
Keep marked side on the inside.

WARNING!


Super glue may cause painting problems. Be aware using super glue for visible areas not to cause unwanted paint situation. If possible, use a glue that is applied under control.

Before attaching the covers, be sure they fit on their houses. You might need sand the edges of the frames to fit the covers. If needed, make wet the covers to bent easily.


15

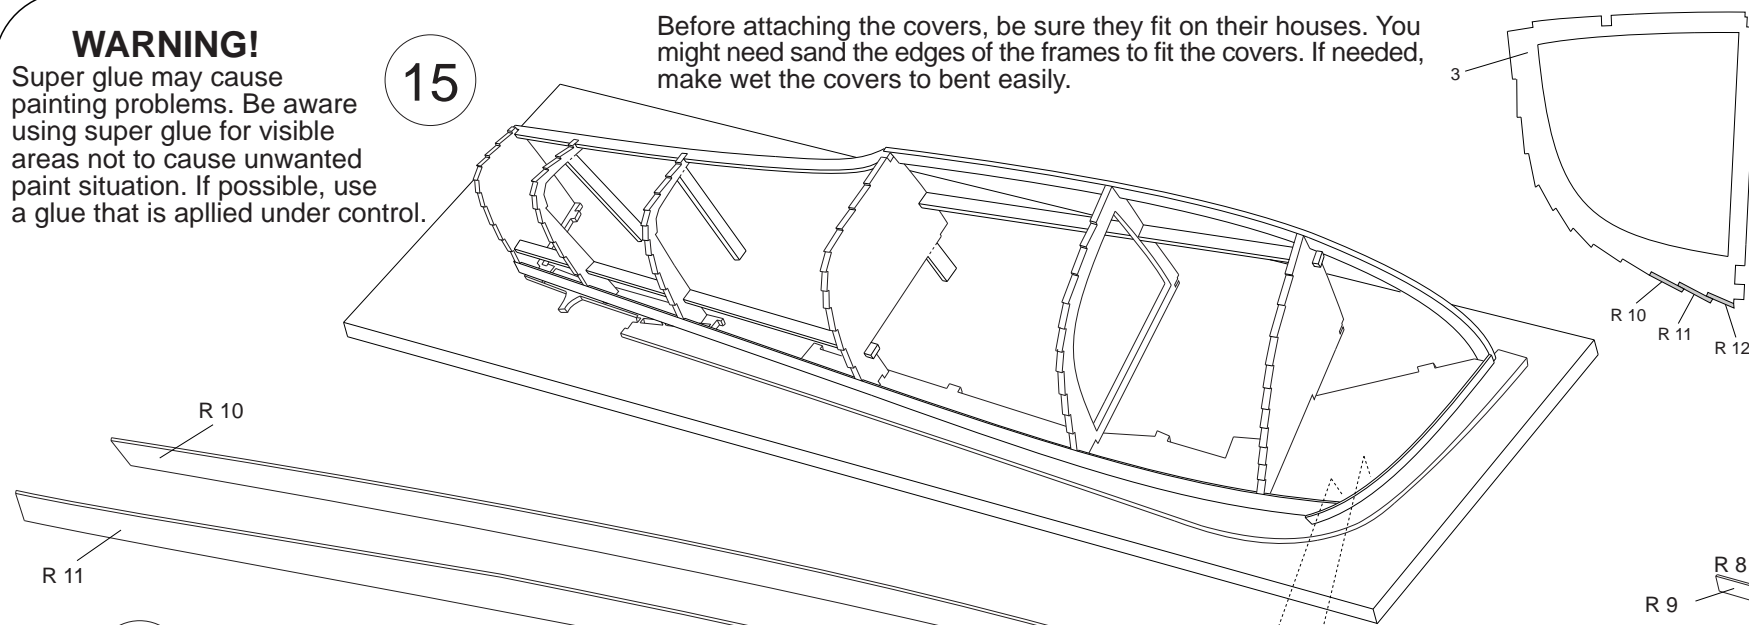


16

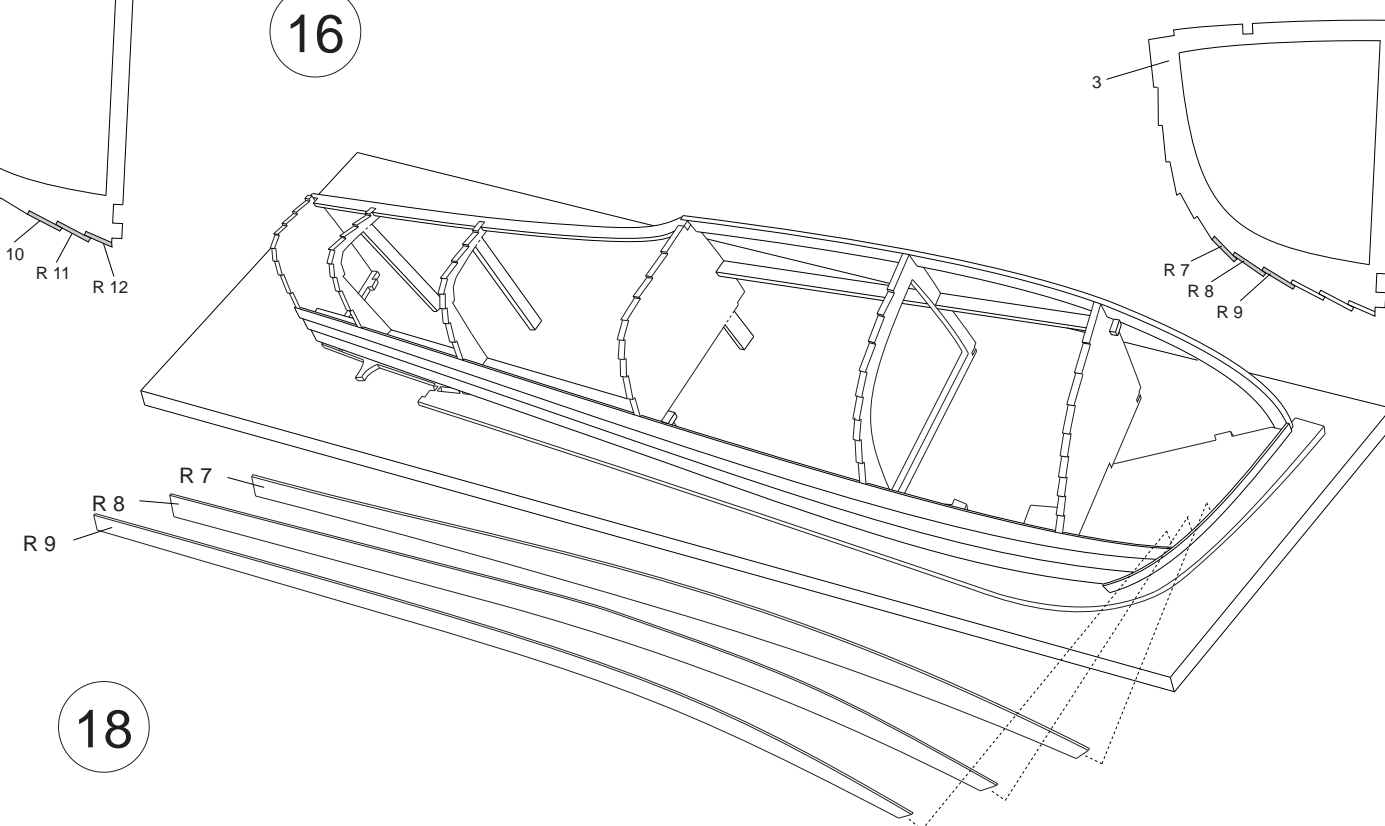


17

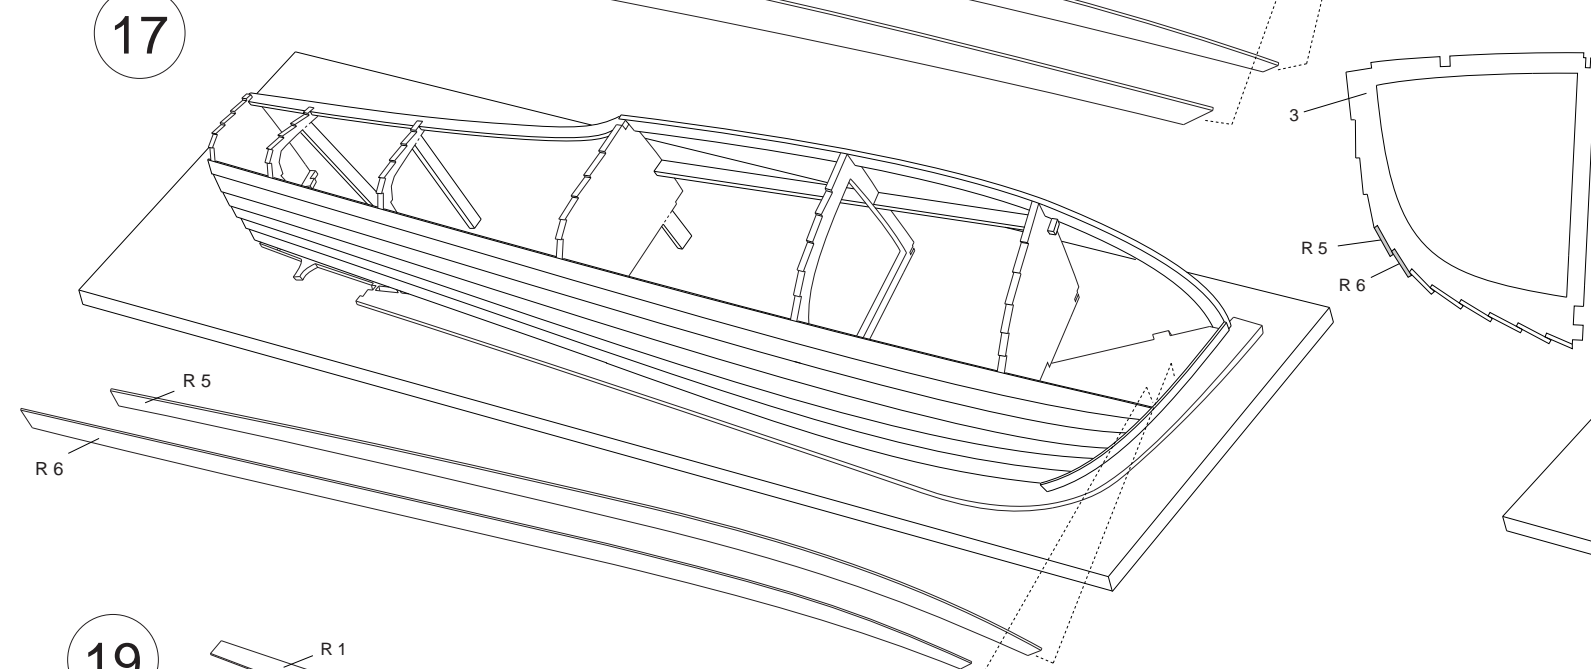


18

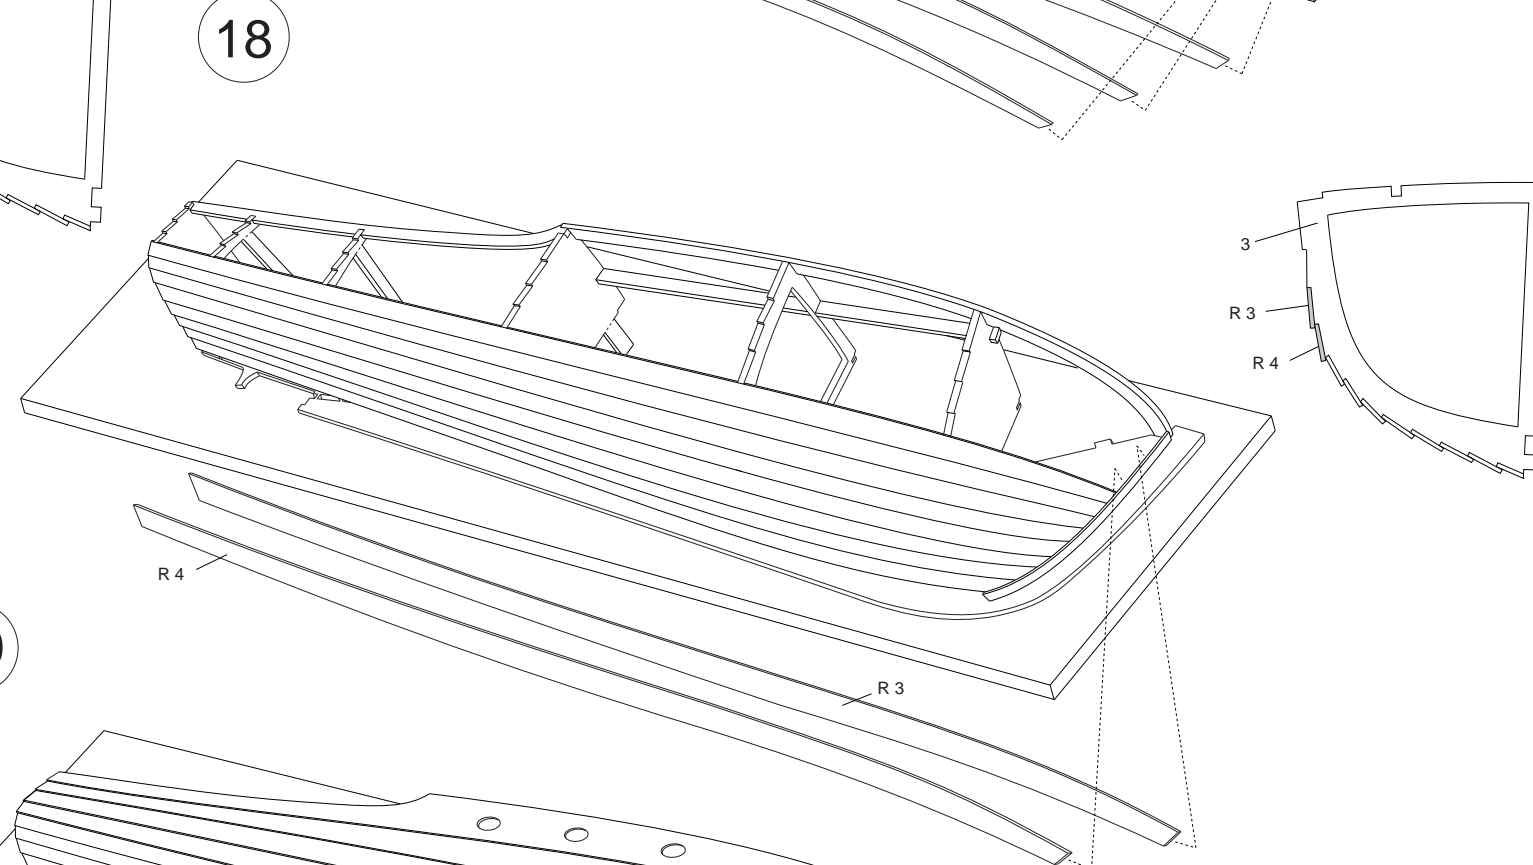


19

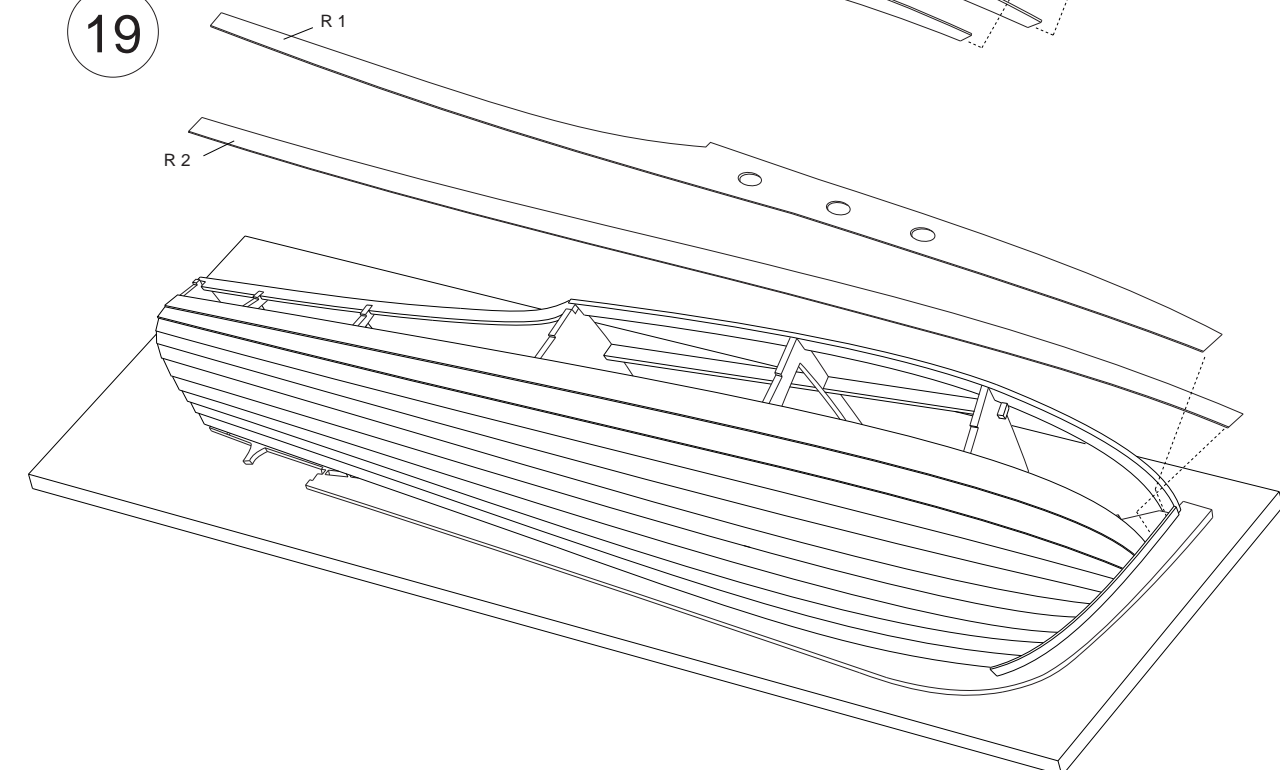


20

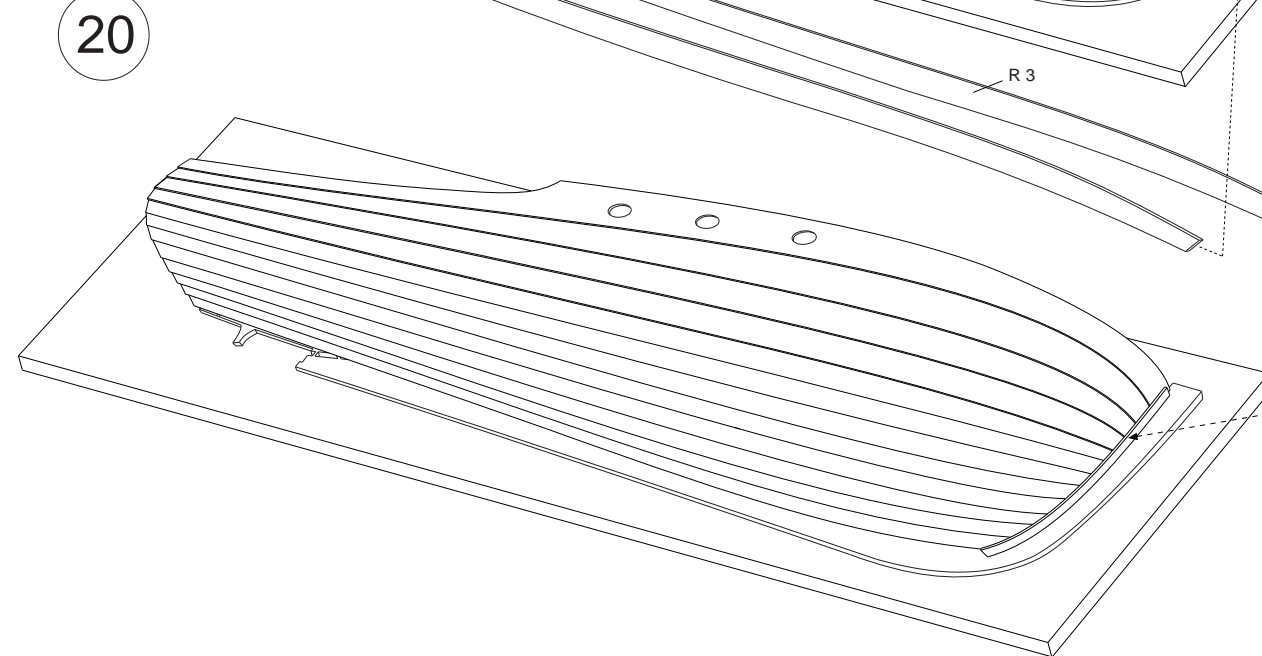


Take this guide off when you ensure the hull is finished.

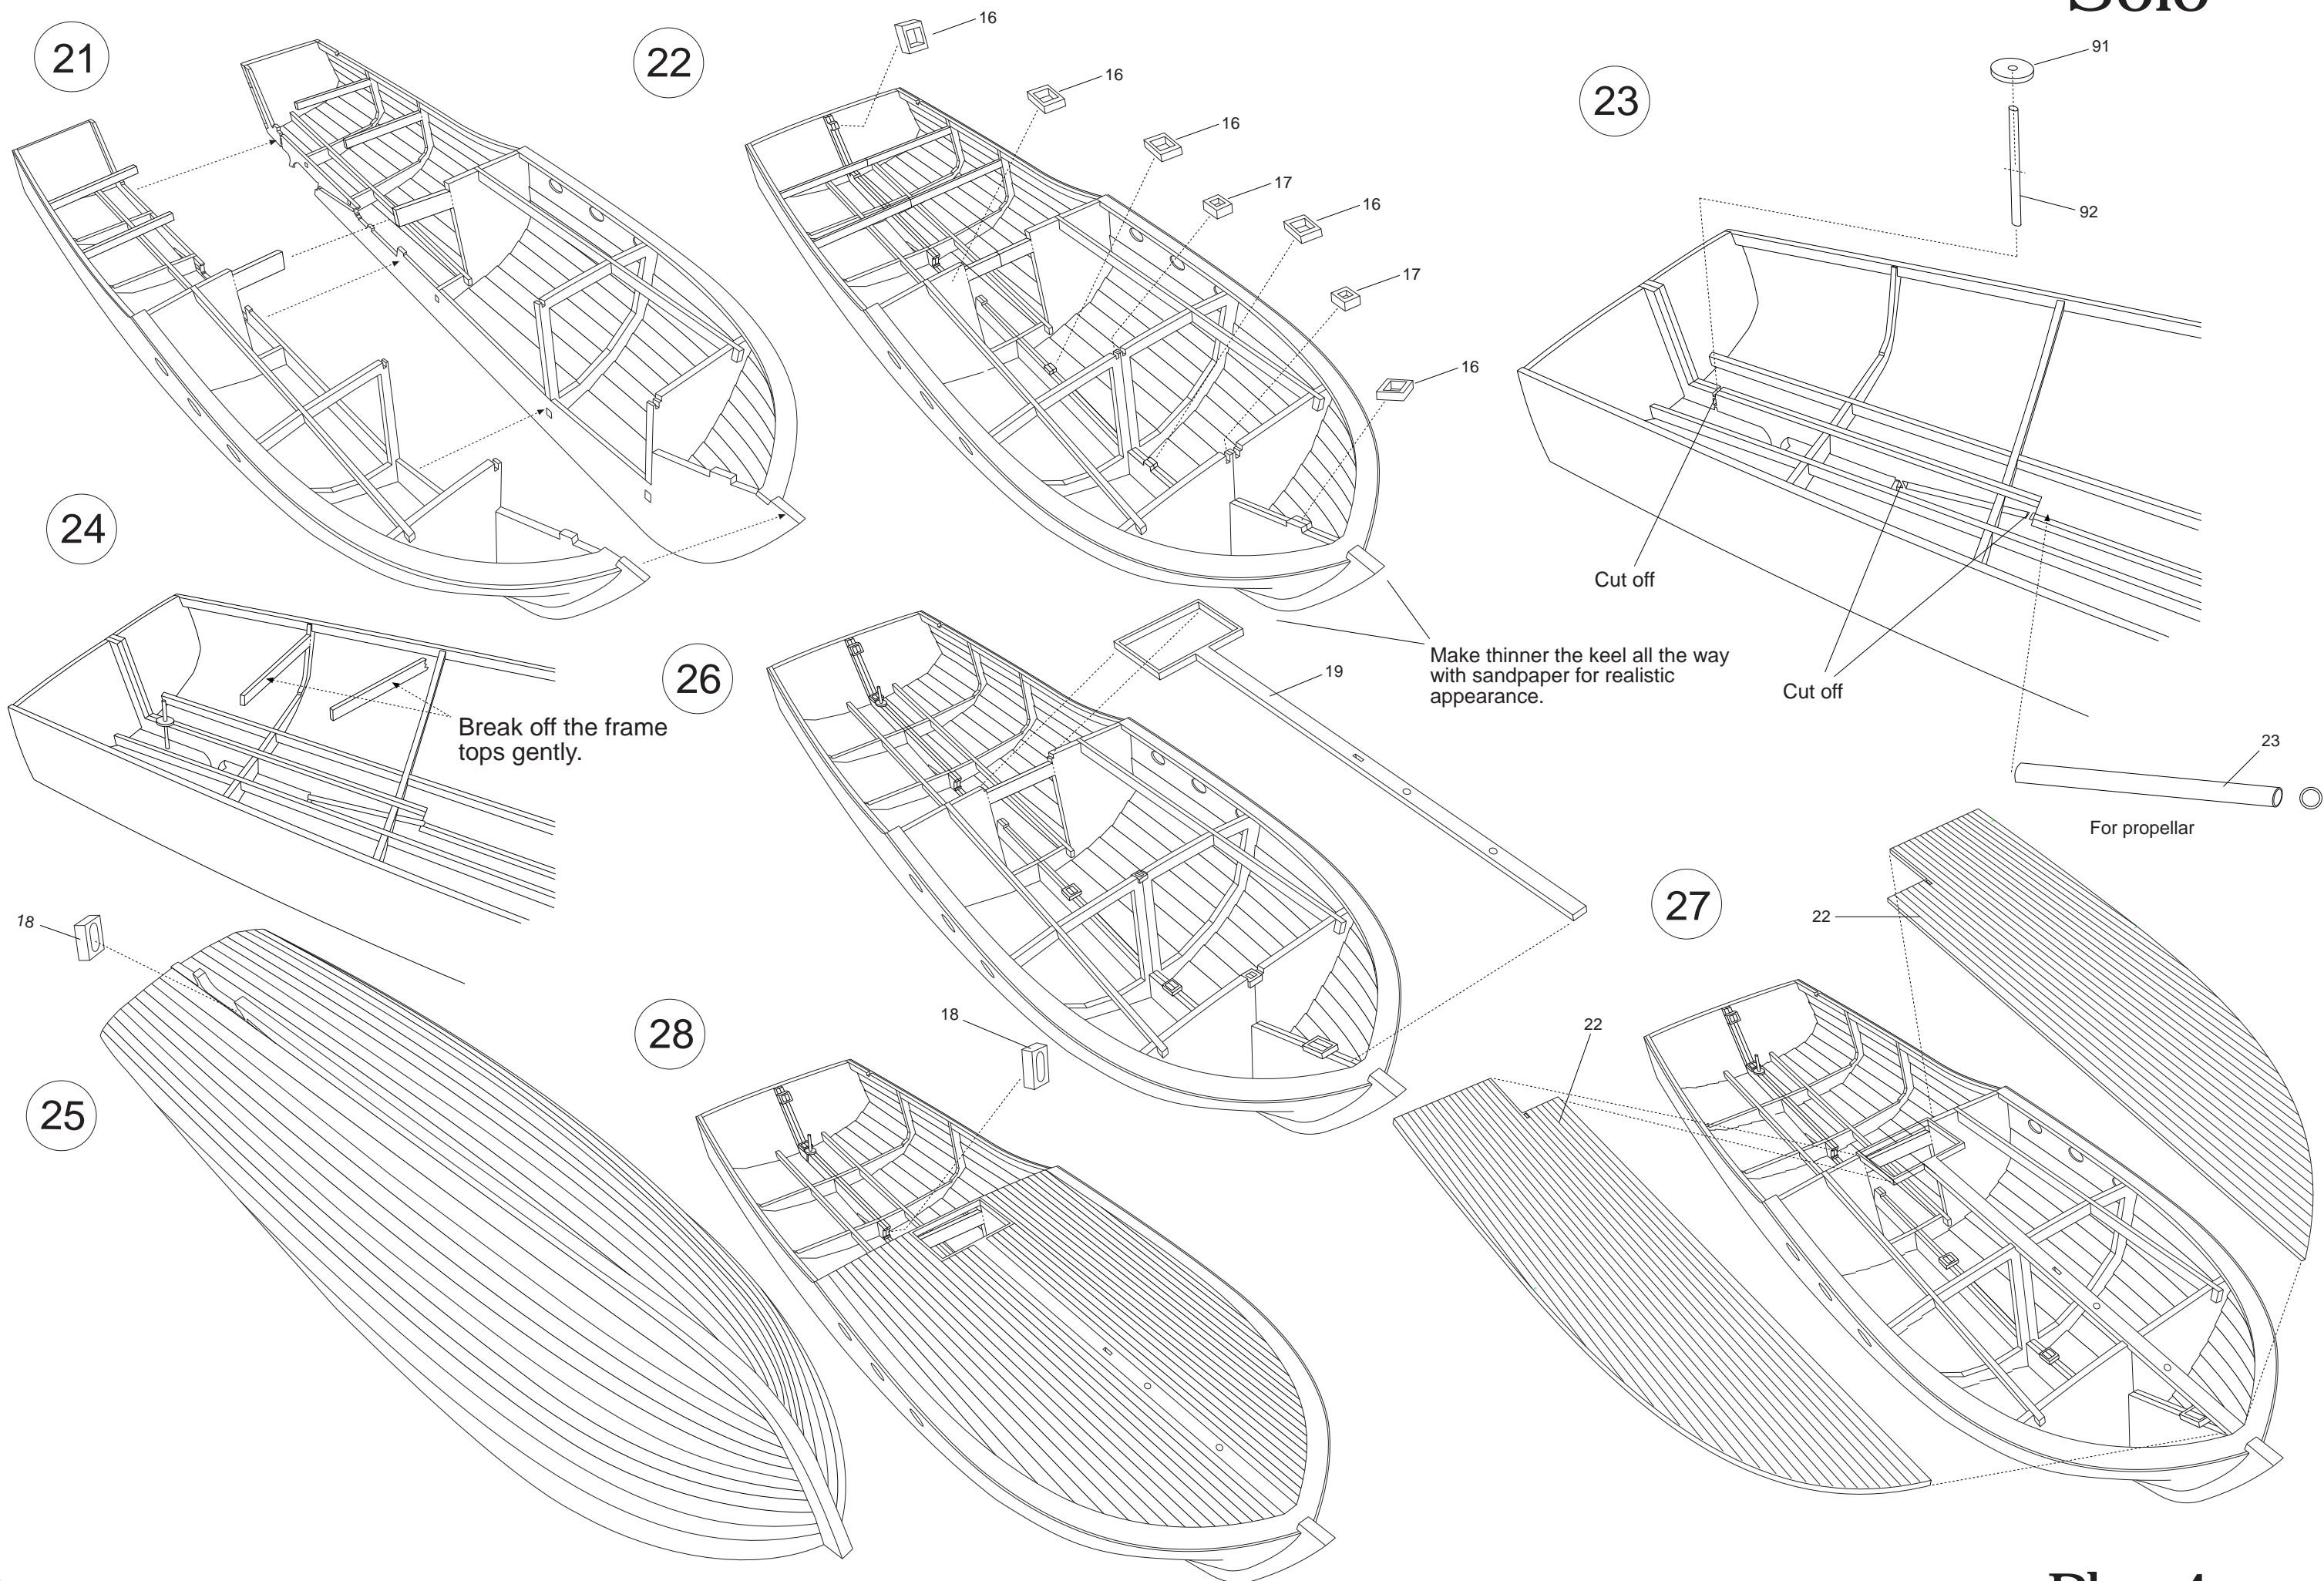


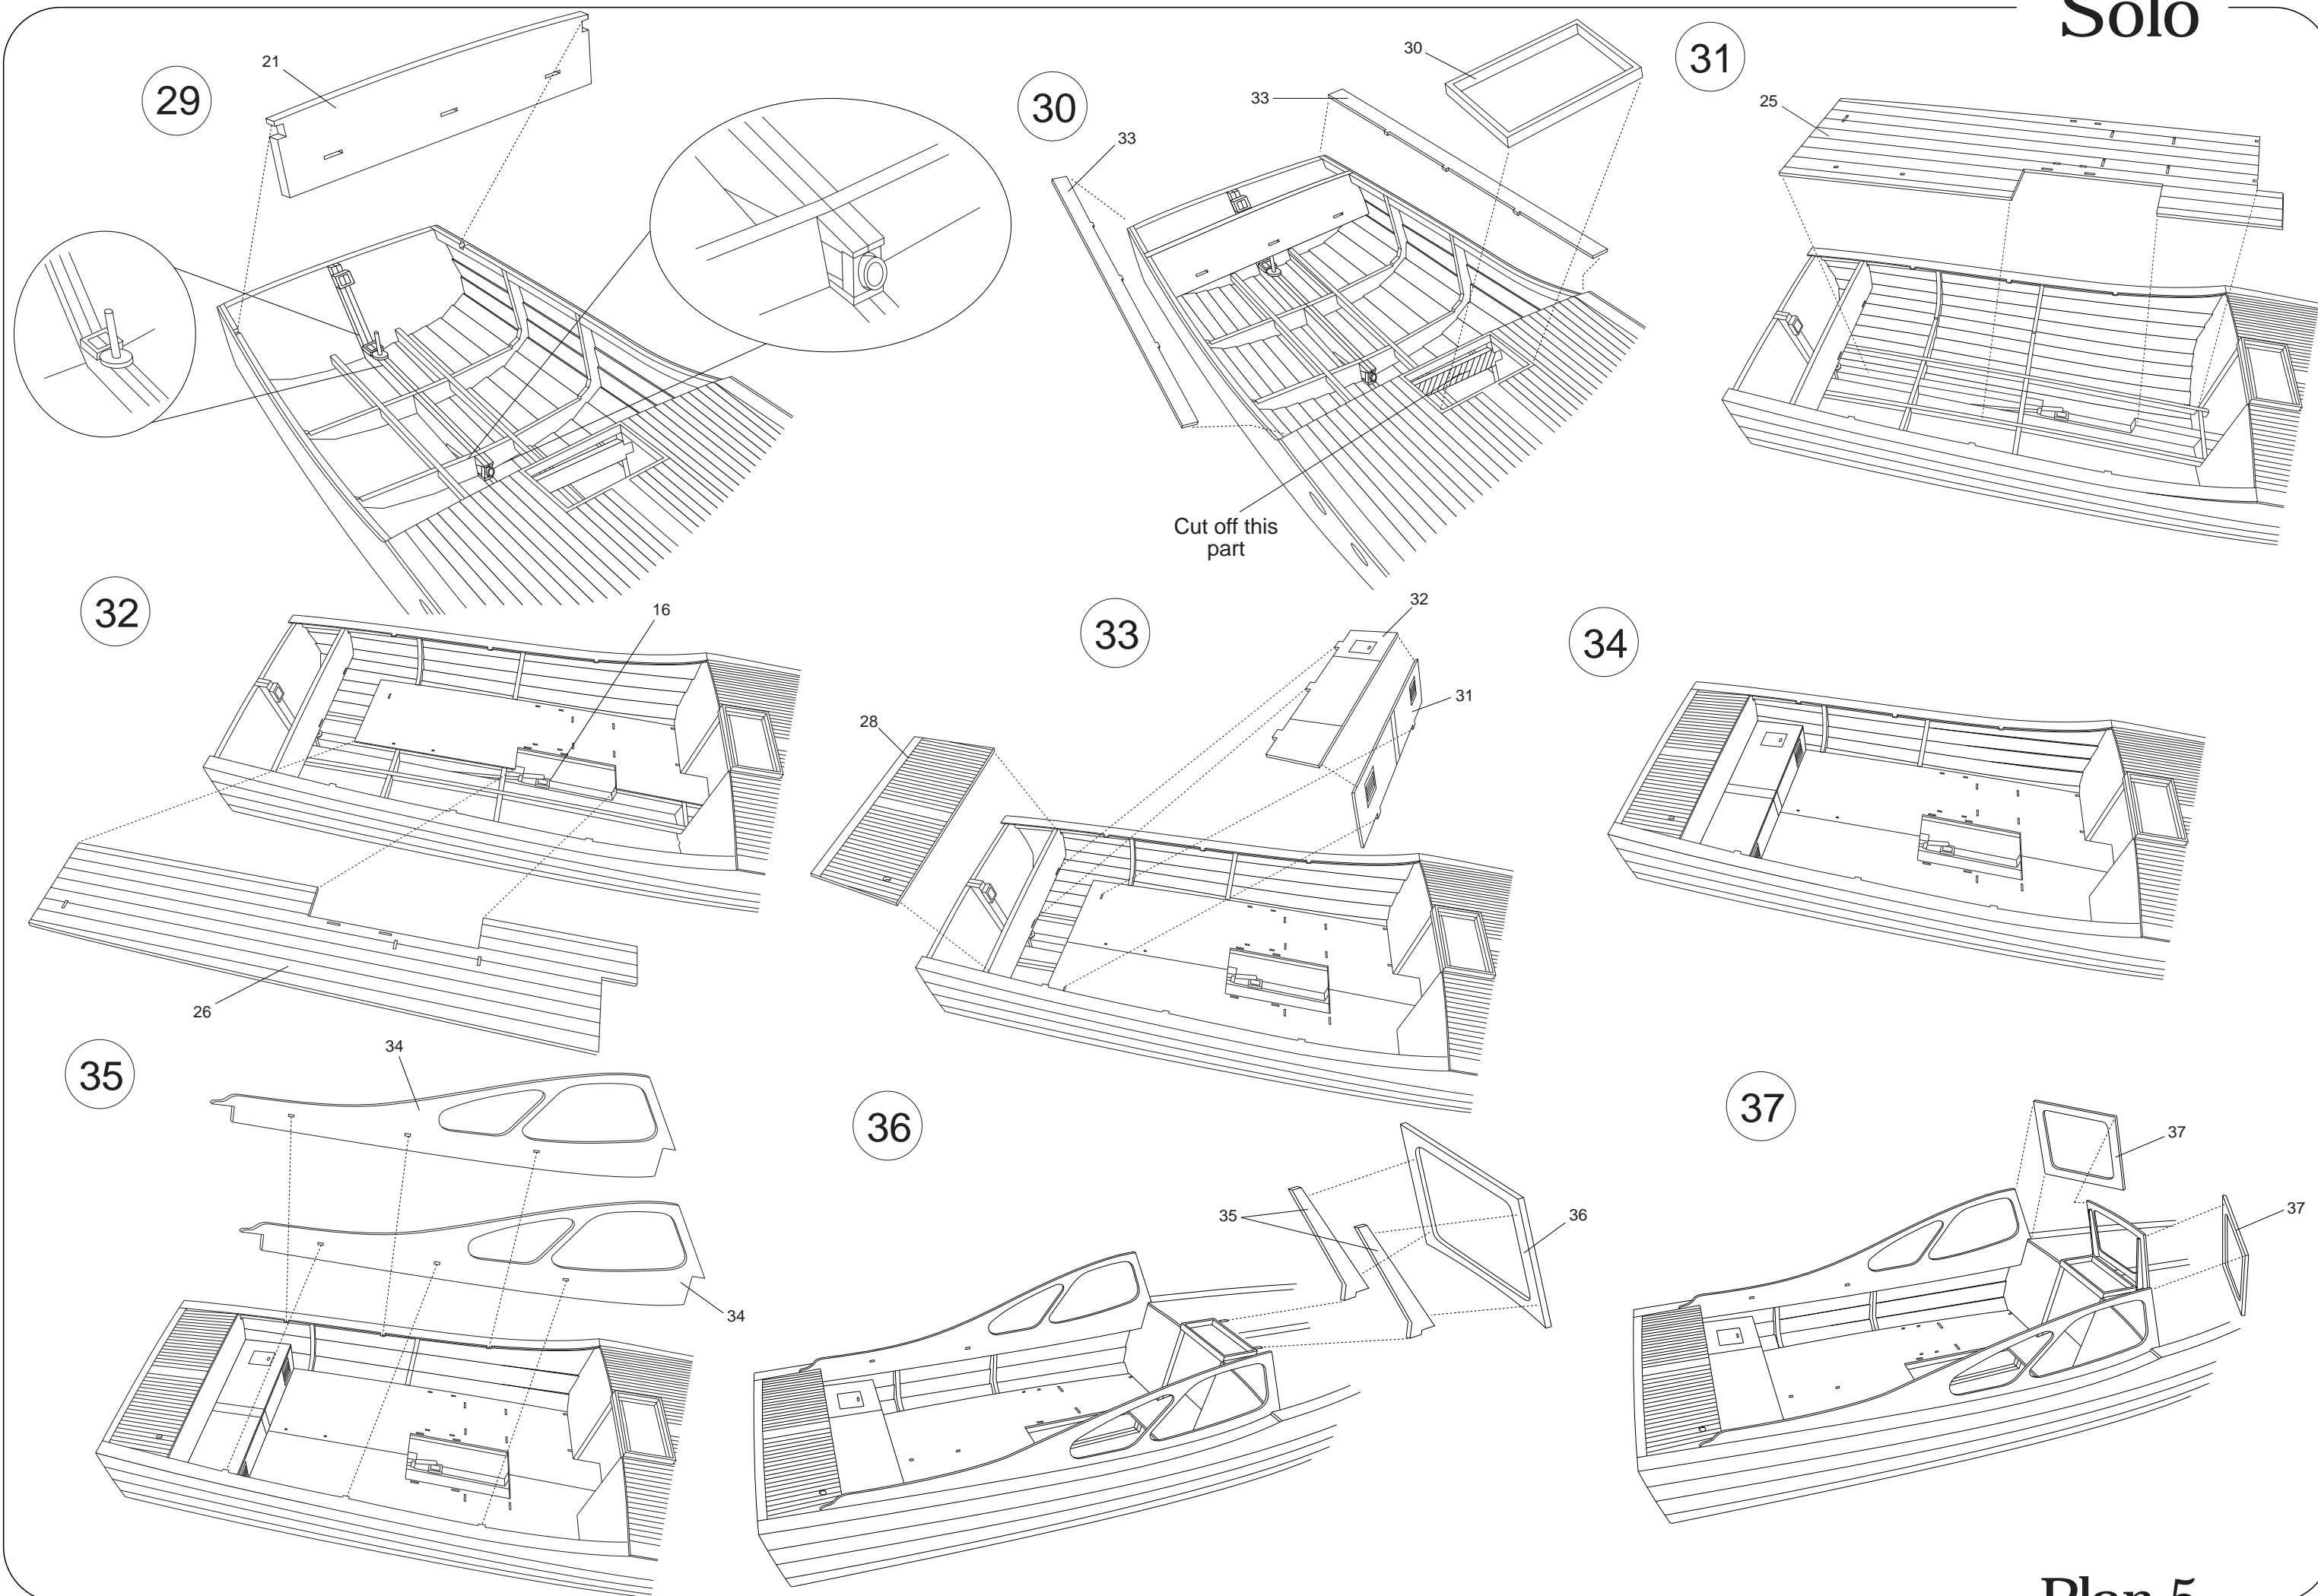


38

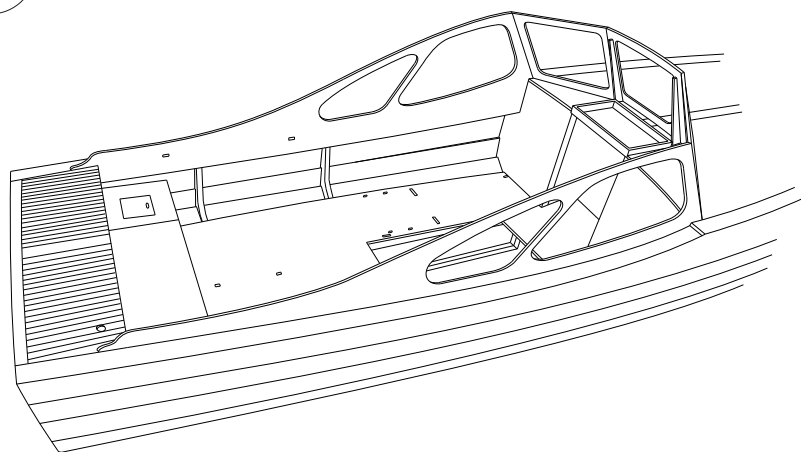


39

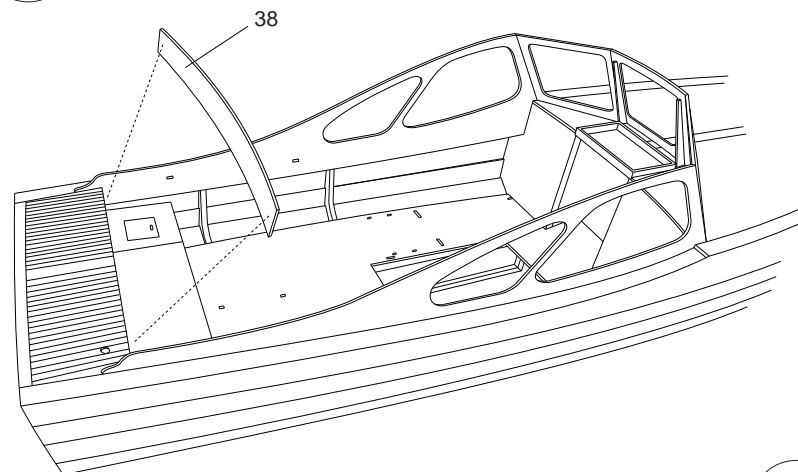


40

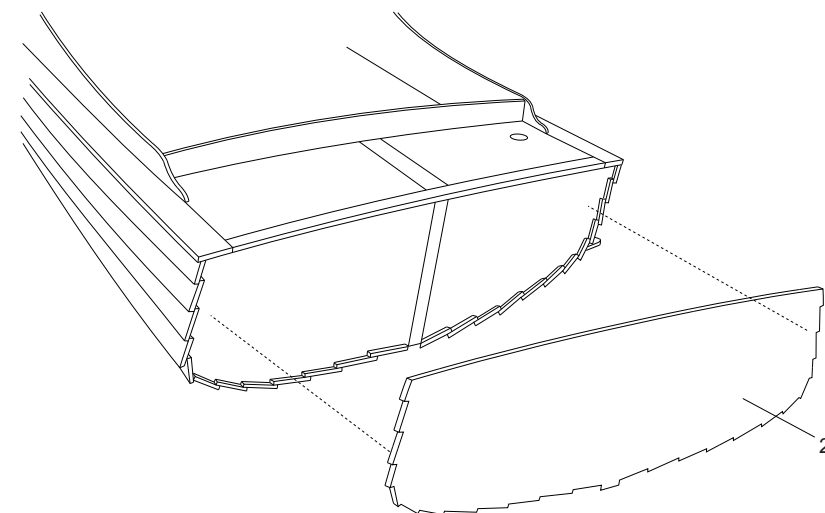


41

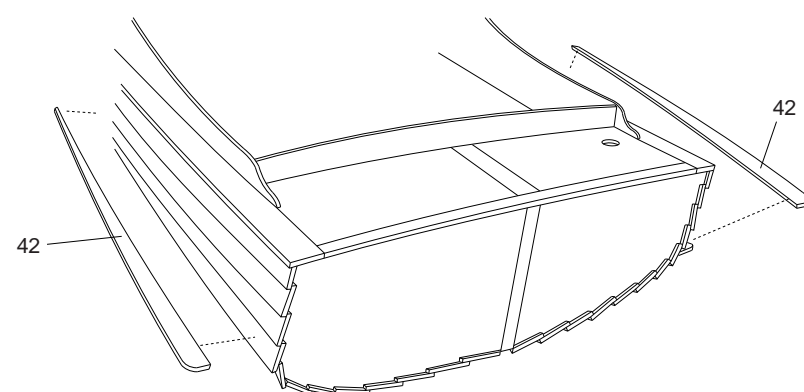


42

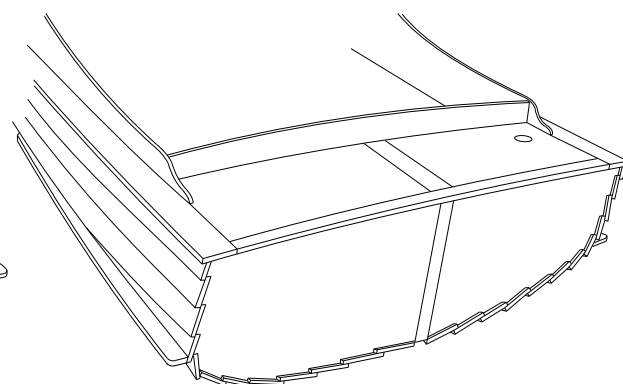


43

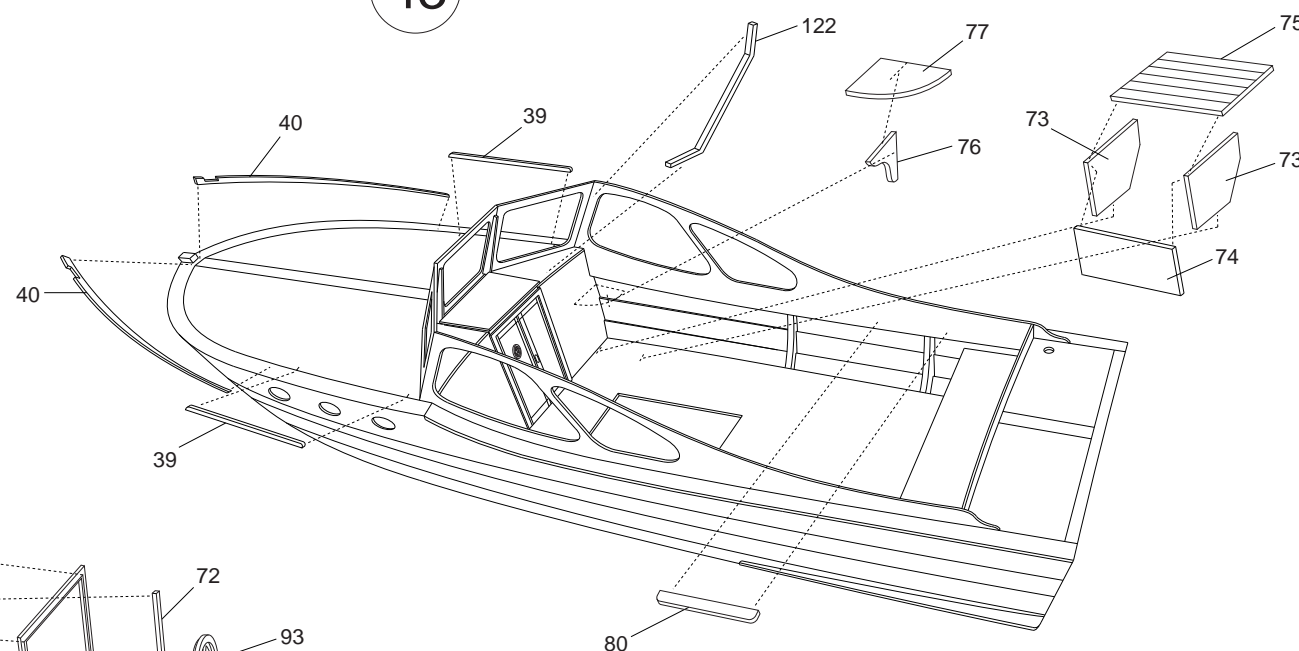


44

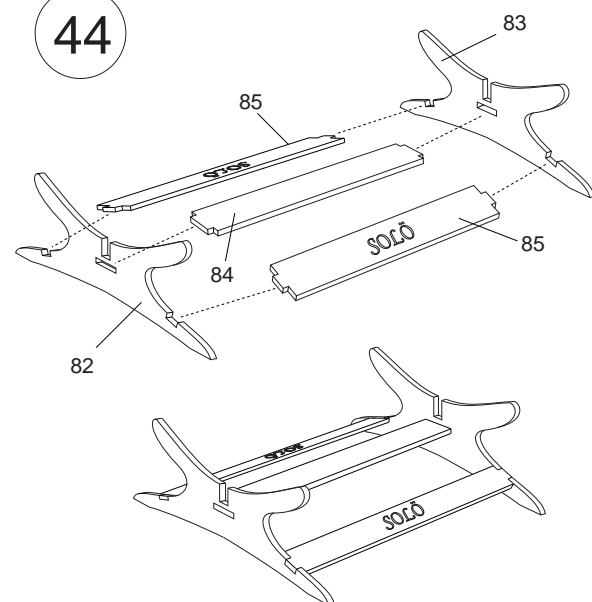


45

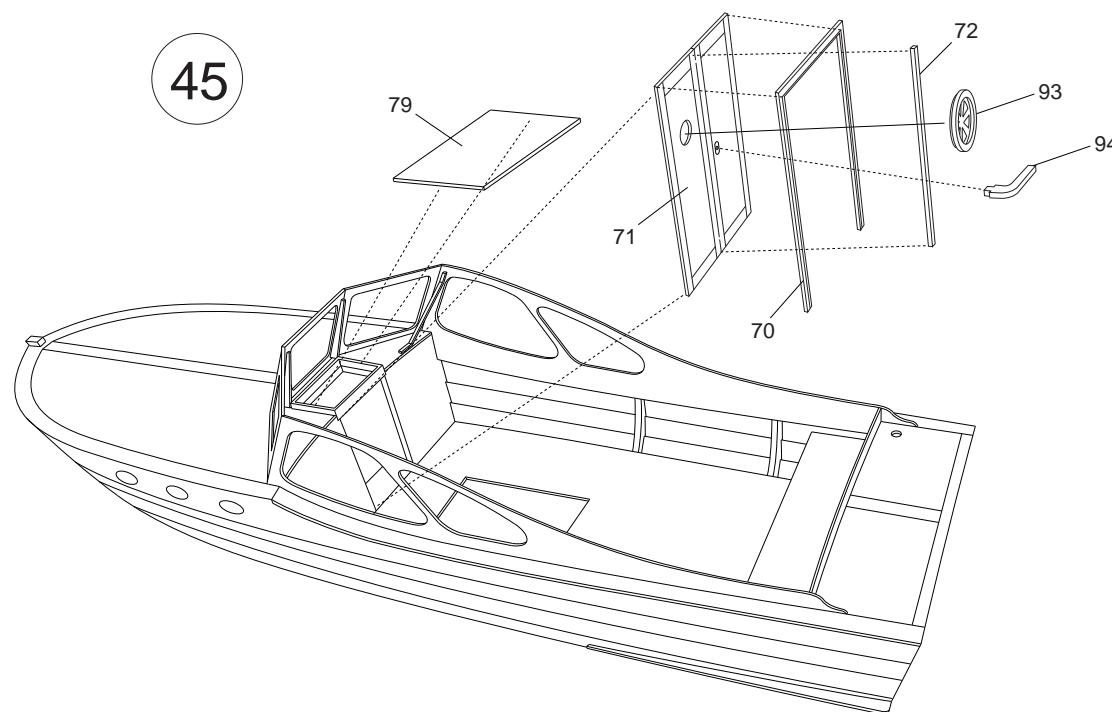


46

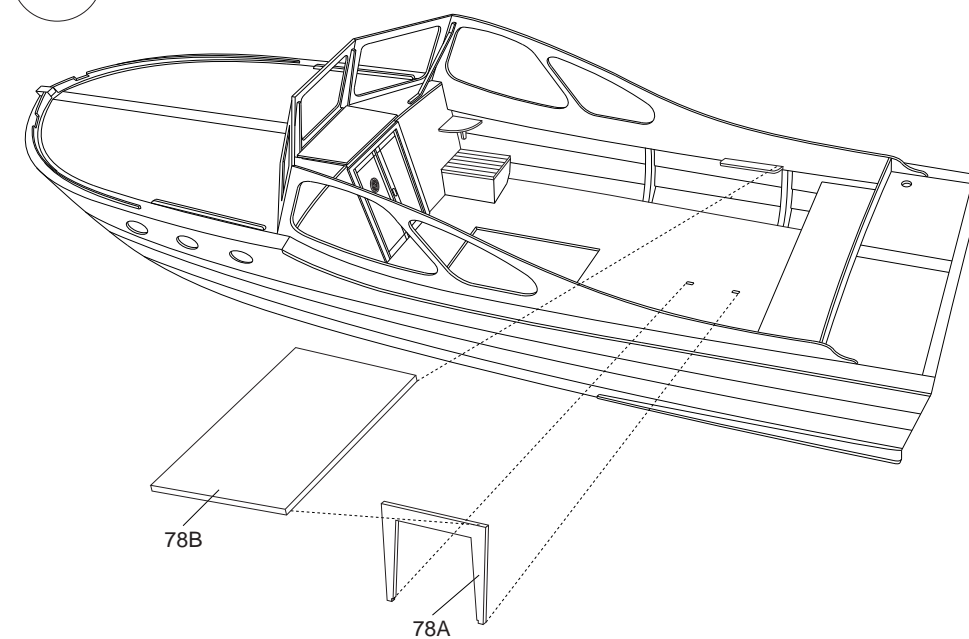


47

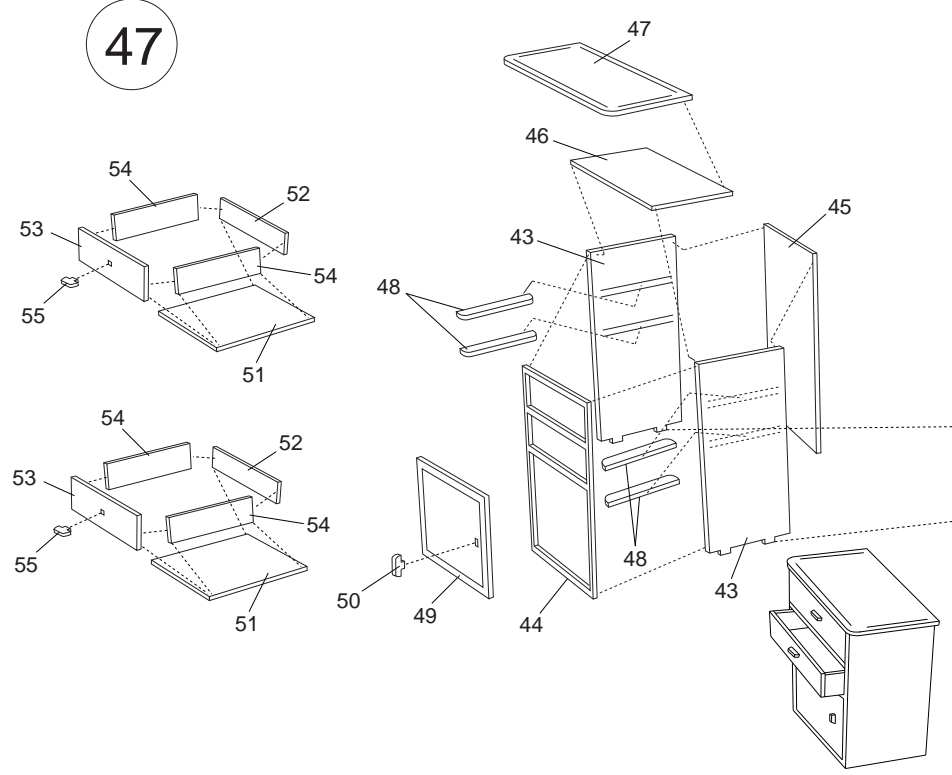


49

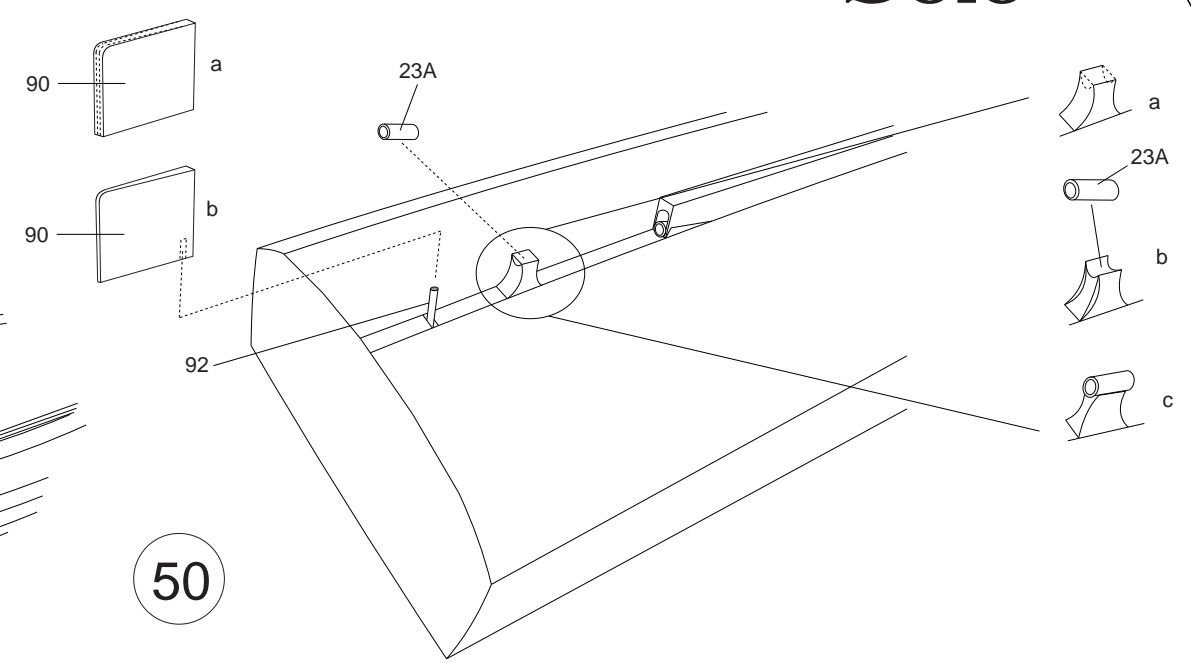


48

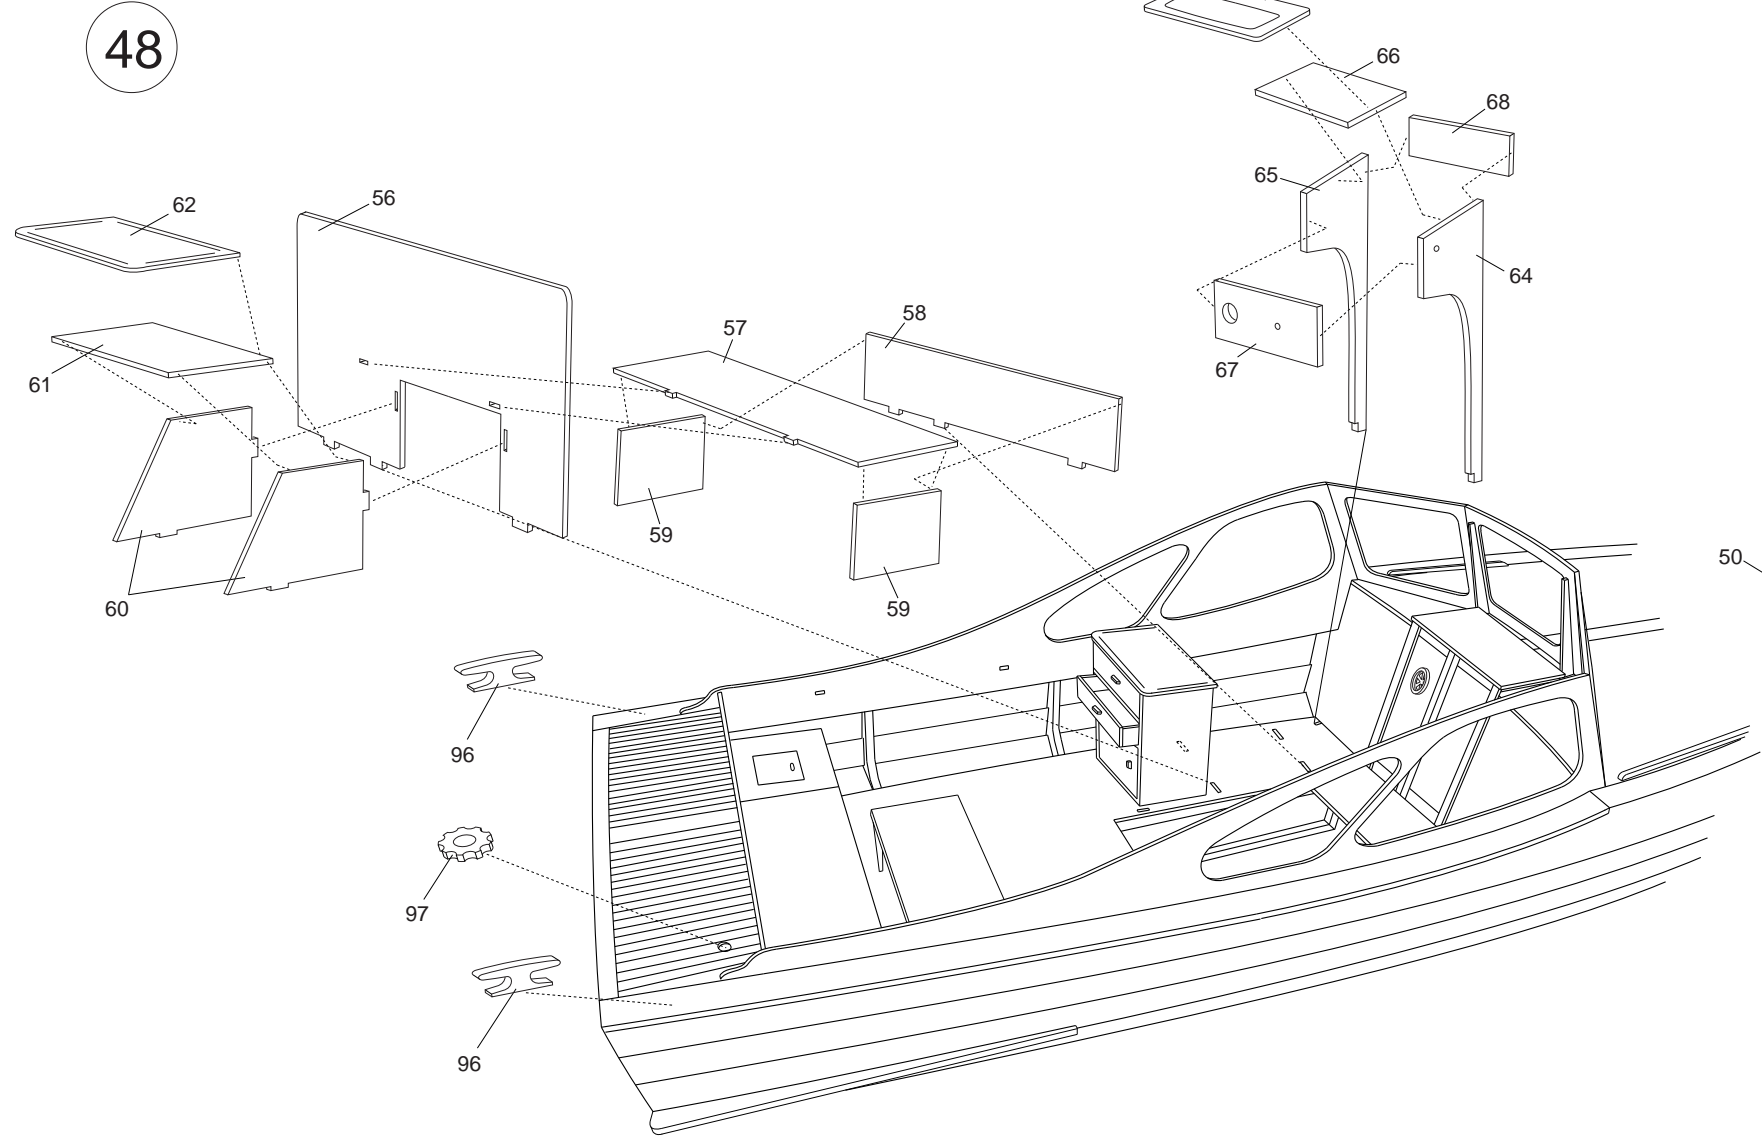


50

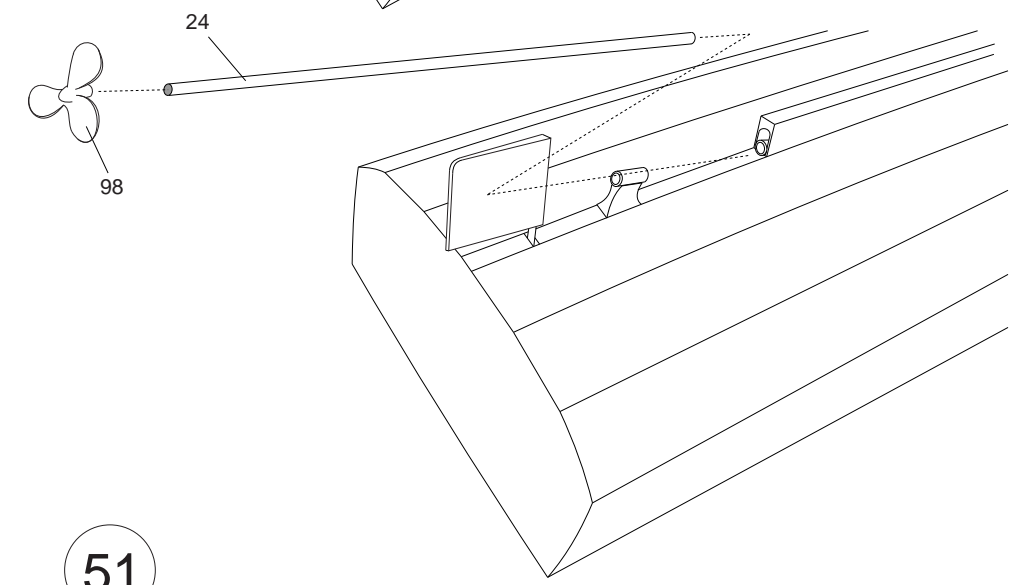


51

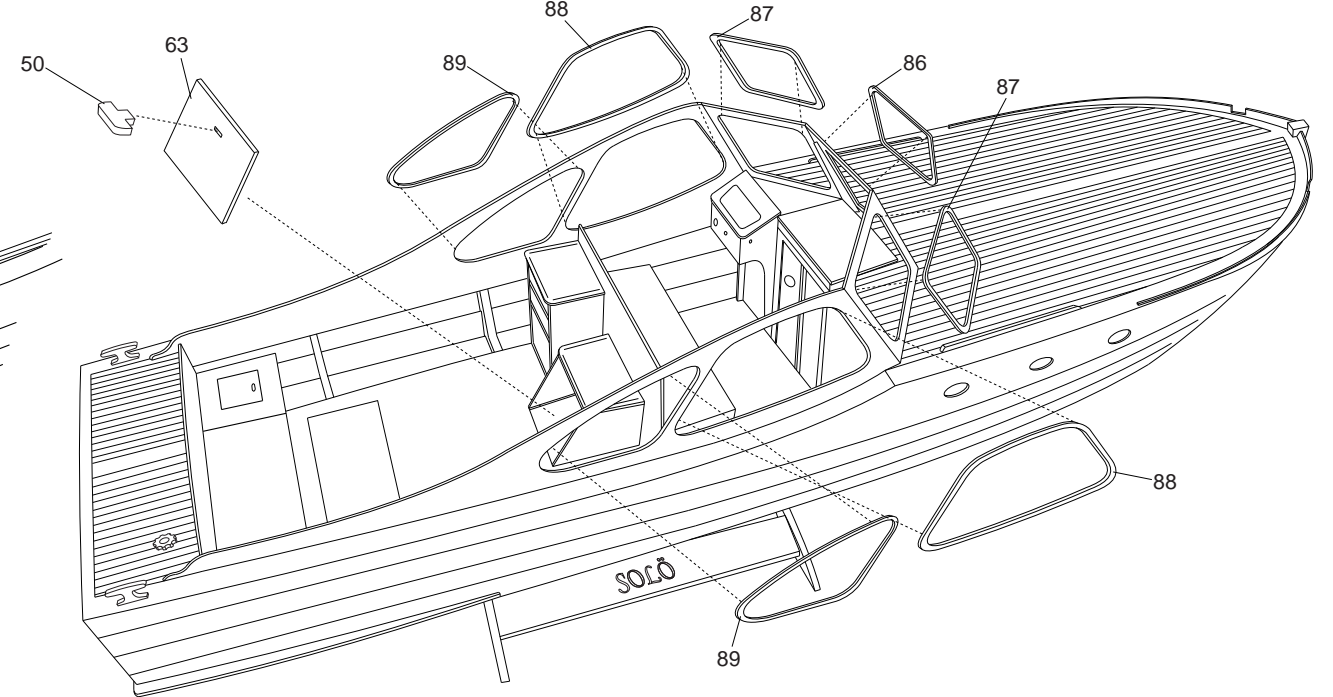


52

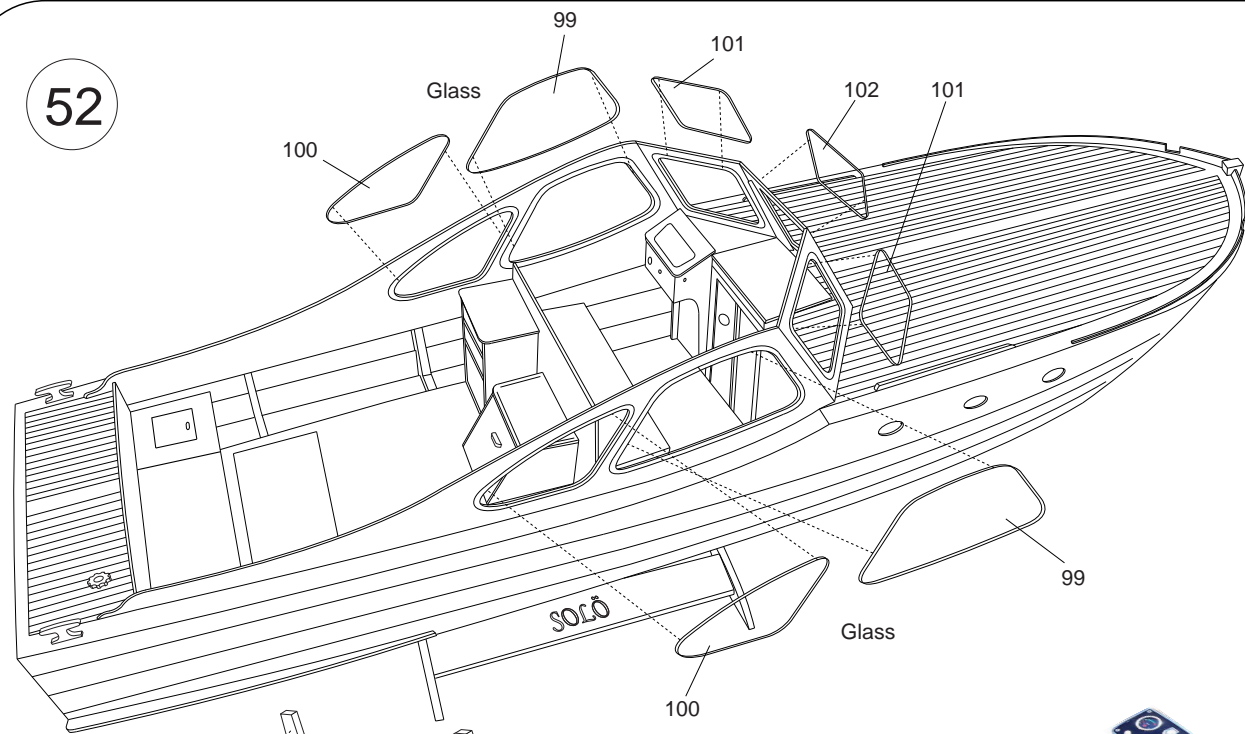


53

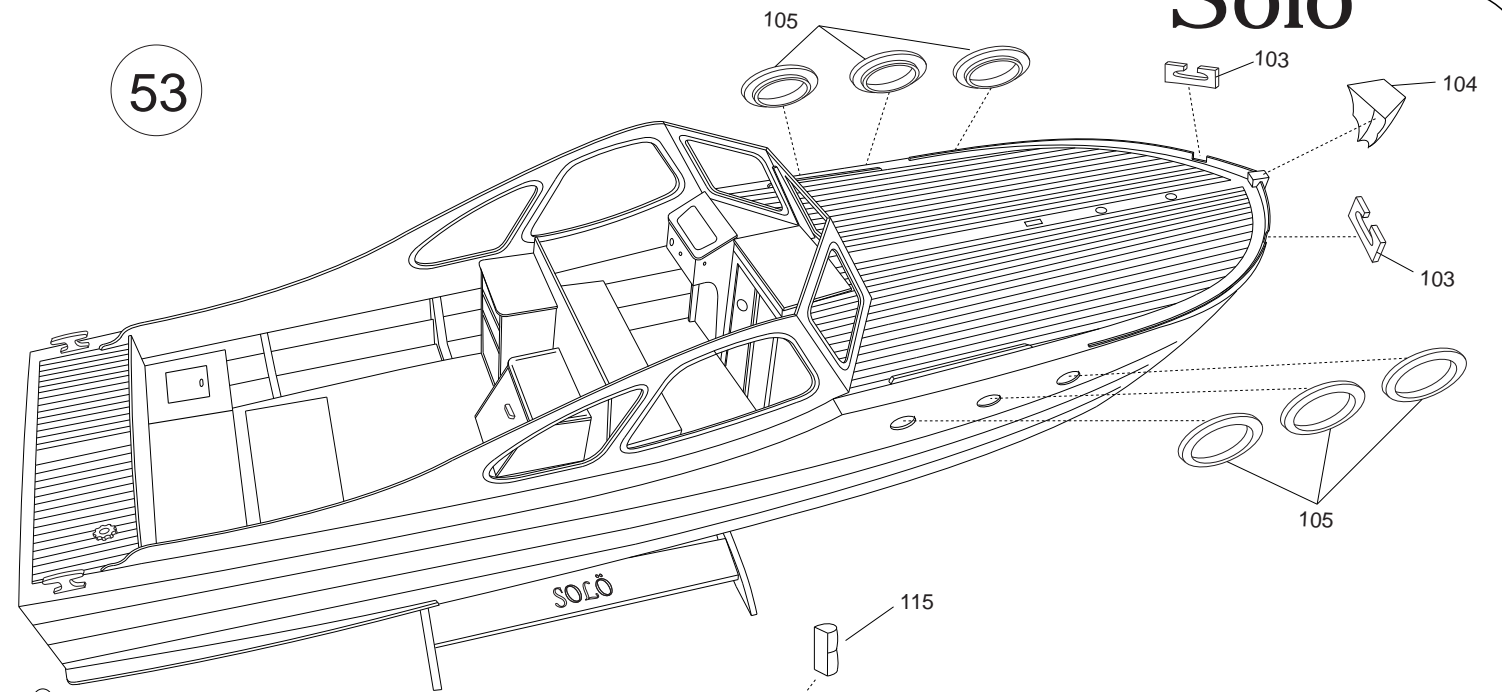

54

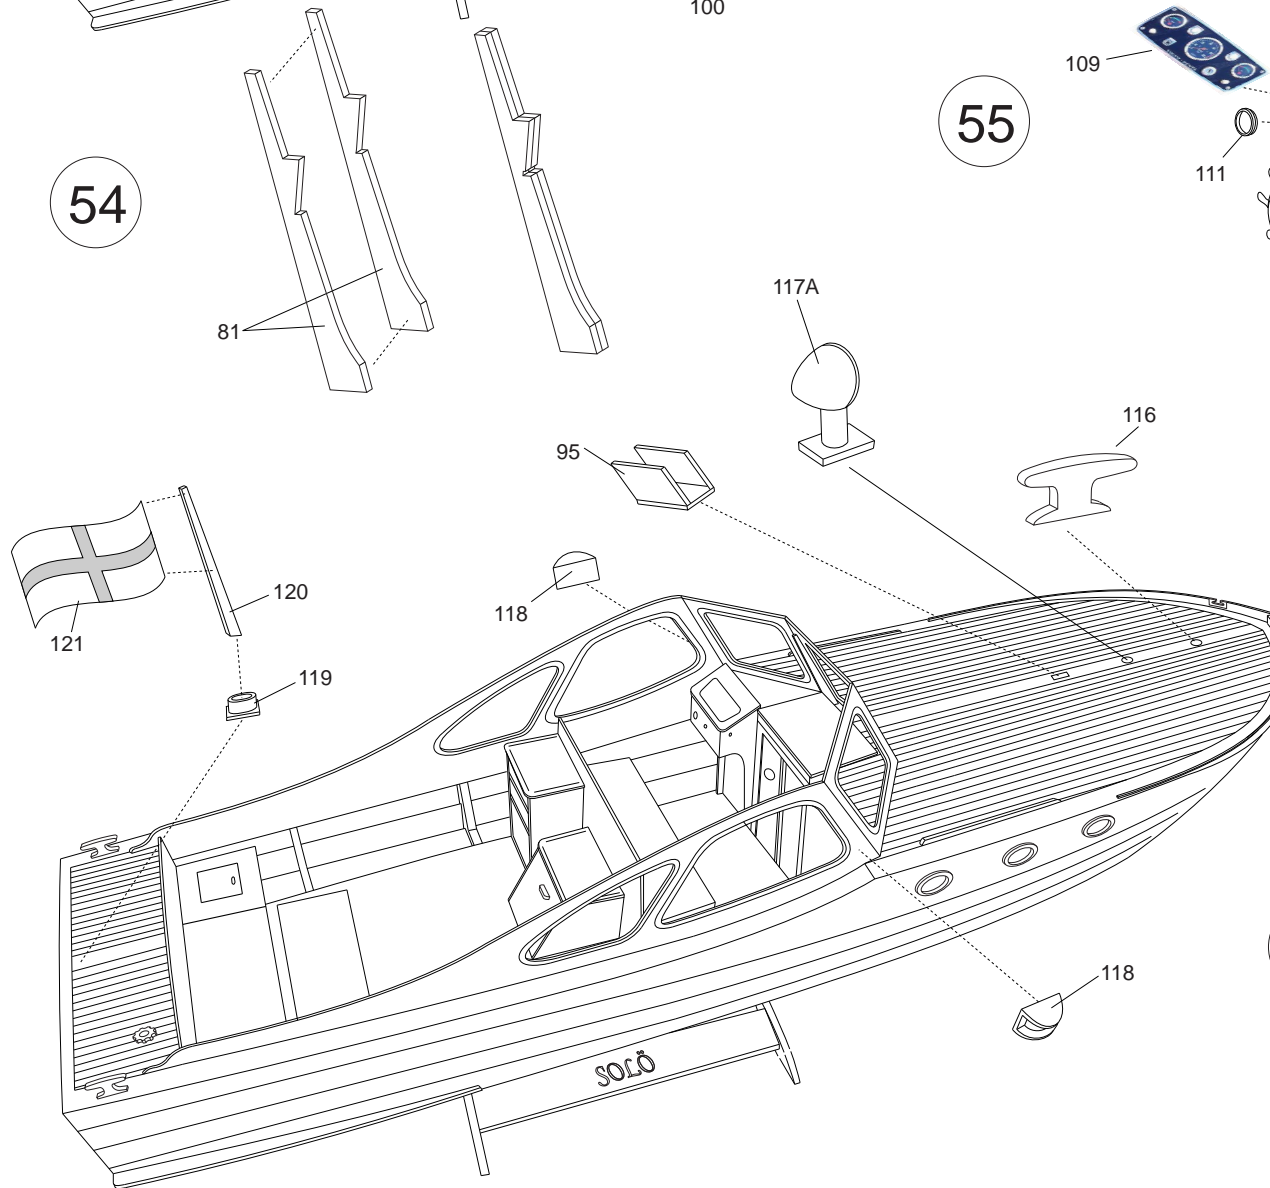

55

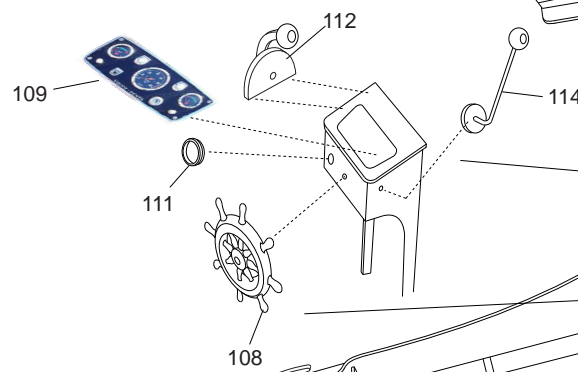

56

